


QUICK INSTALLATION GUIDE

MAX KEYPAD

RESIDENTIAL / COMMERCIAL APPLICATION

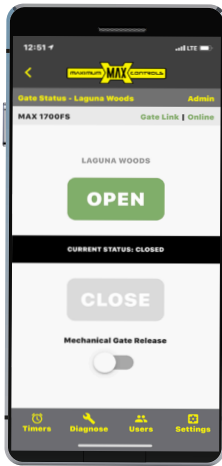

Max Cloud App



Max Cell Hub



Max Operator



Max Keypad



Max Keypad

Overview 3

Pedestrian door application 4

Entry gate application 6

Program Keypad greetings message 7

Program Keypad call button message..... 8

Program force open keycodes 9


Program keycodes with restrictive times 10





**Max Keypad requires a Max Cell Hub.
Both work exclusively with Max Gate Operators**



MAX Keypad

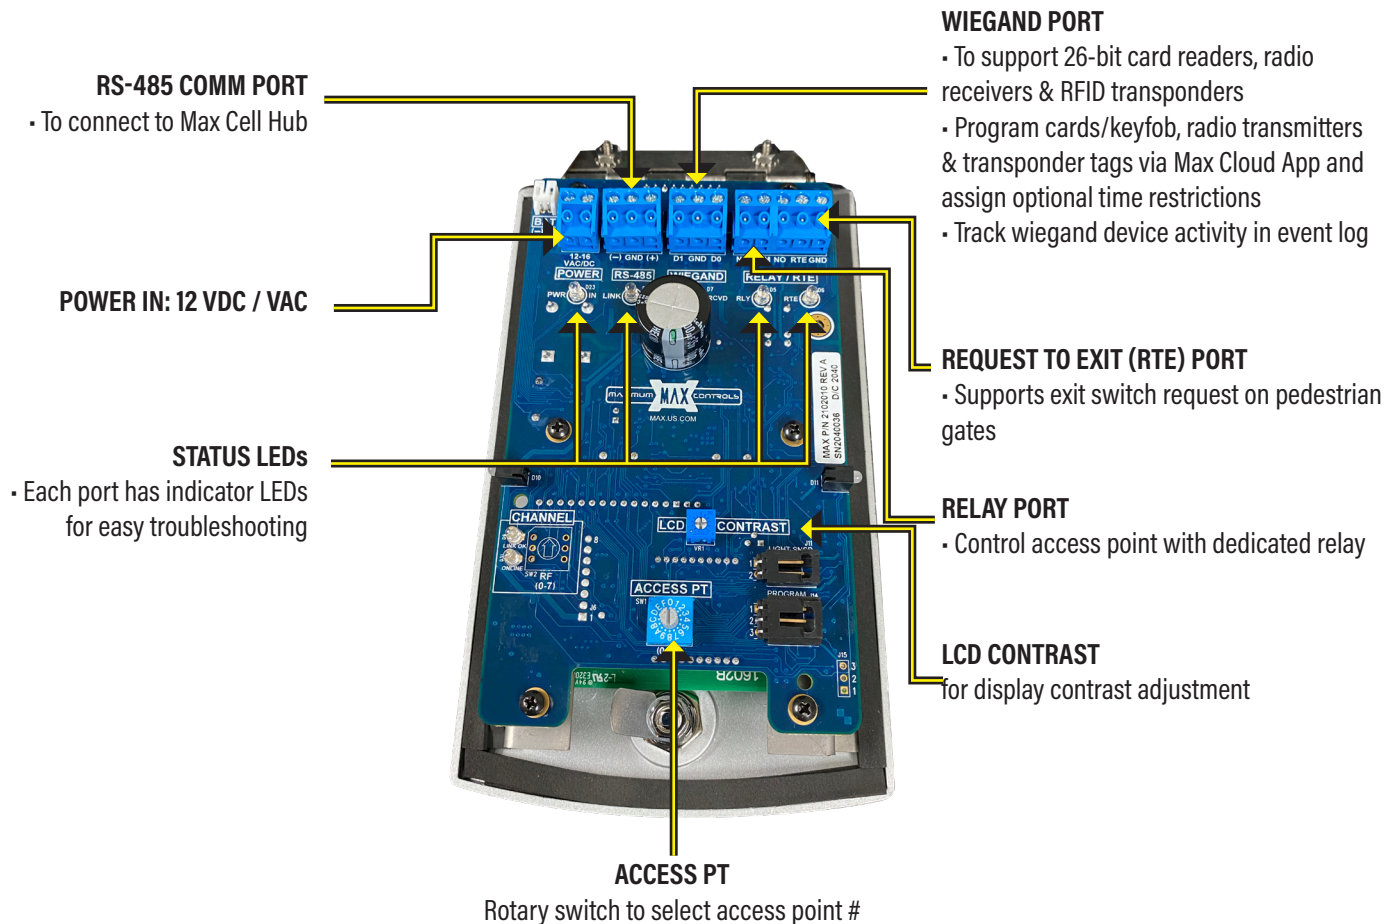


PEDESTRIAN DOOR

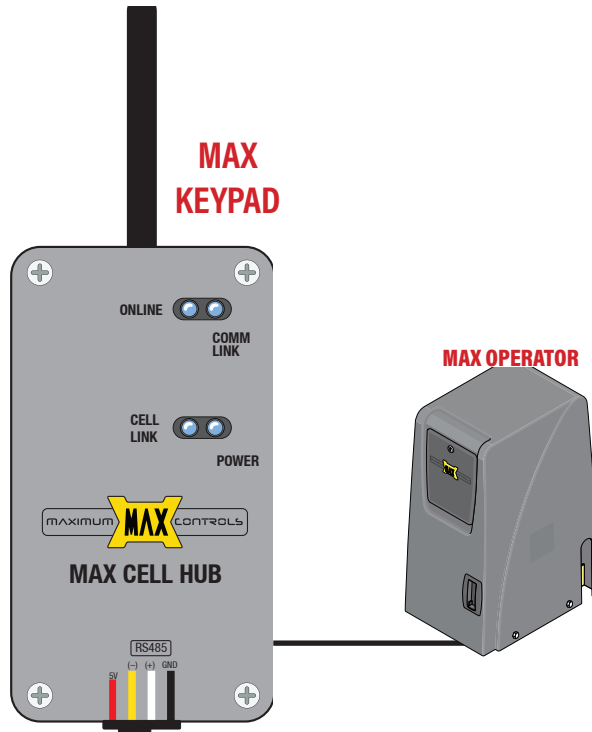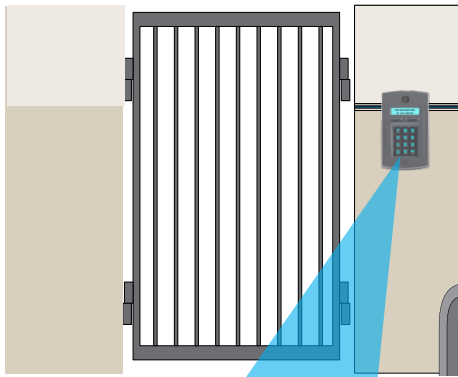

1 Wiring Power Input


Connect 12VDC, 1A power transformer to *Power Input* port of Max Keypad (polarity does NOT matter)

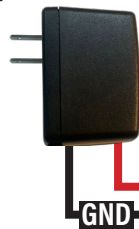


Verify POWER LED is ON

2 Wiring Hub to Keypad

Connect RS-485 port of Max Cell Hub to RS-485 port of Max Keypad
 (+) to (+)
 (-) to (-)
 GND to GND

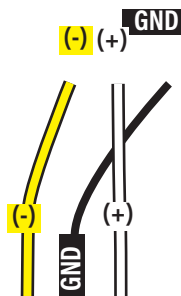


Verify RS-485 LED turns ON otherwise revise your wiring

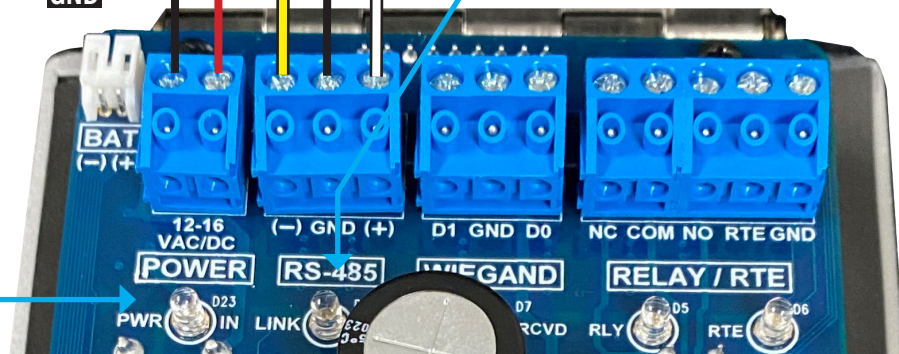

3 Wiring Solenoid Lock

Install Solenoid Lock as shown below

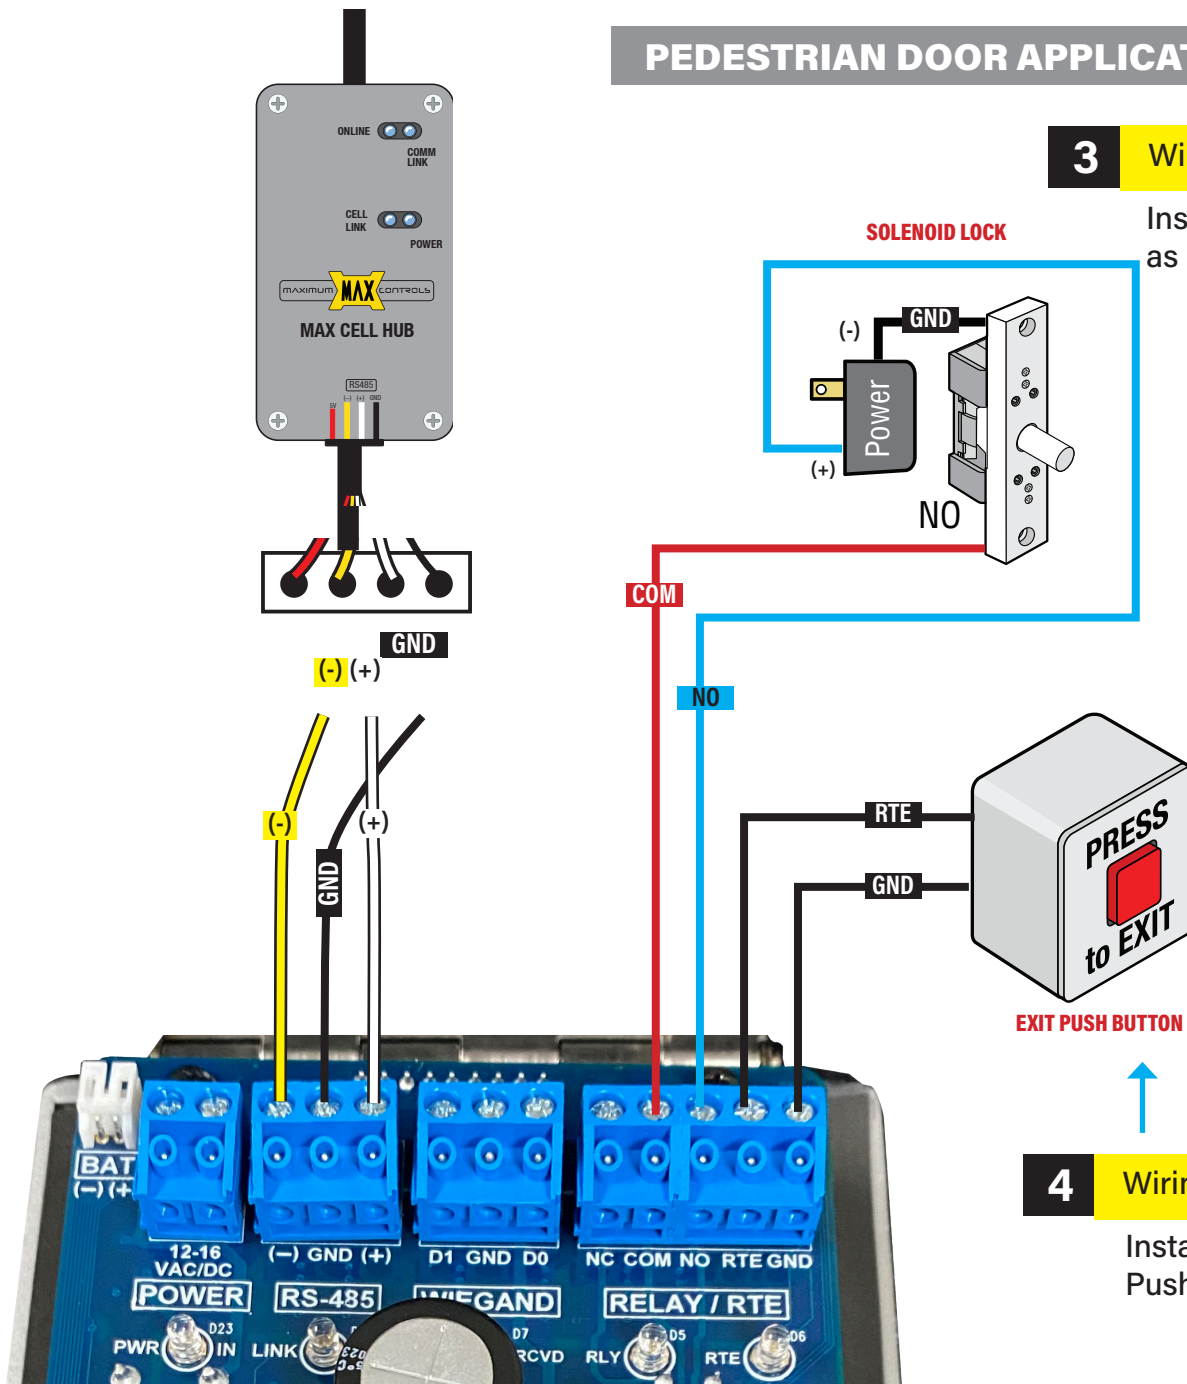


4 Wiring Exit Push Button

Install request to Exit Push Button as shown

5 Select "Access PT#" using rotary switch


Select #1-14: to open gate using Keypad relay

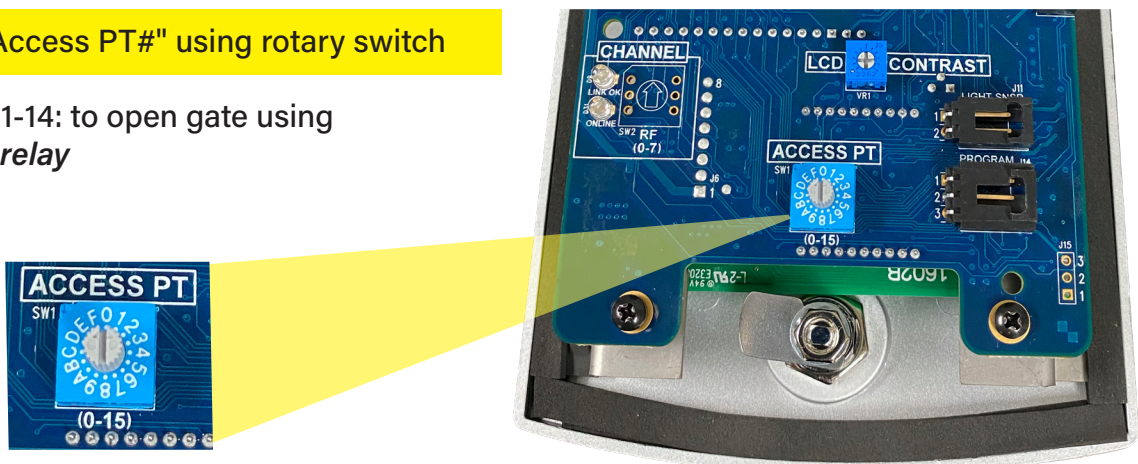




ENTRY GATE APPLICATION USING MAX KEYPAD

ENTRY GATE

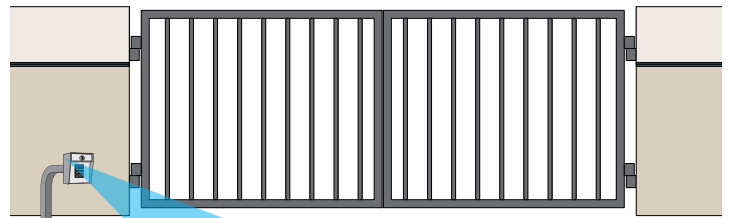

MAX OPERATOR

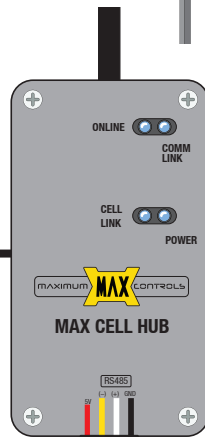


MAX KEYPAD

4 Wiring Wiegand Device

Install wiegand device as shown

1 Wiring Hub to Keypad

Connect RS-485 port of Max Cell Hub to RS-485 port of Max Keypad (+) to (+) (-) to (-) GND to GND

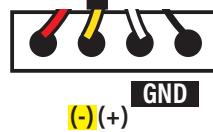

Transponder


Wiegand Receiver

OR




2 Wiring Power Input

Connect 12VDC, 1A power transformer to Power Input port of Max Keypad (polarity does NOT matter)

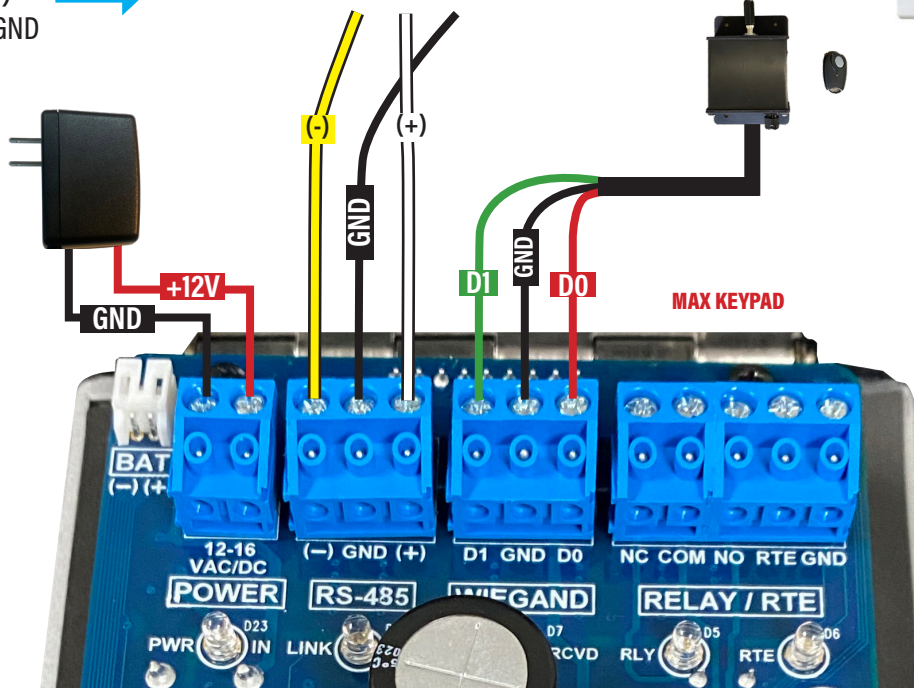


3 Select "Access PT#" using rotary switch

Select #0: to open gate via Cell Hub (note: keypad relay NOT activated)
Select #15: to open gate via Cell Hub (note: keypad relay is also activated)

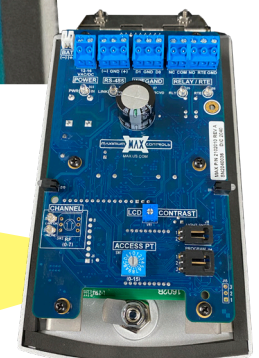


1 Press **Settings** icon in the main menu

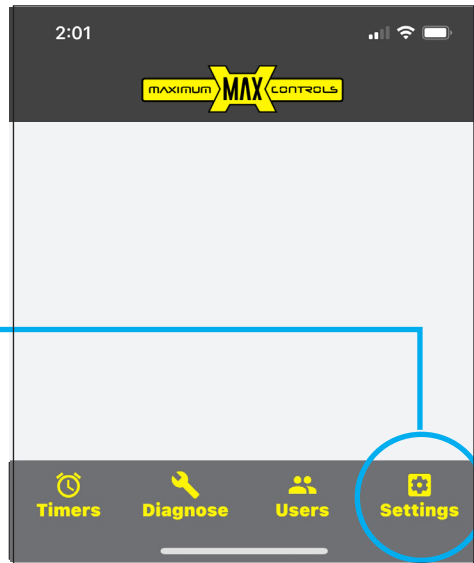


2 Setup greeting message


Go to the **GREETING** area and type the message you want to display for your visitors. Limited to 32 characters.

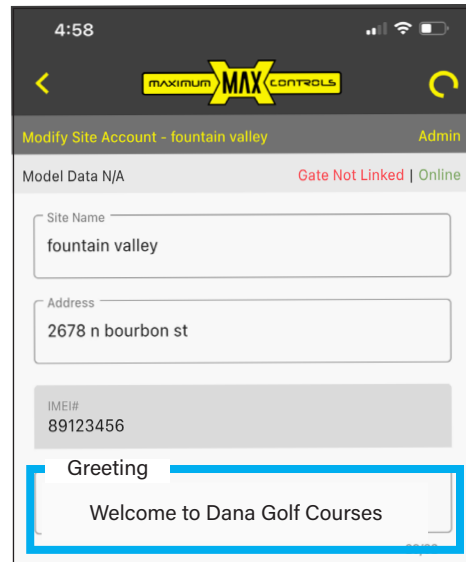

3 Press the **back button** [**<**] on the top left of the screen to confirm changes

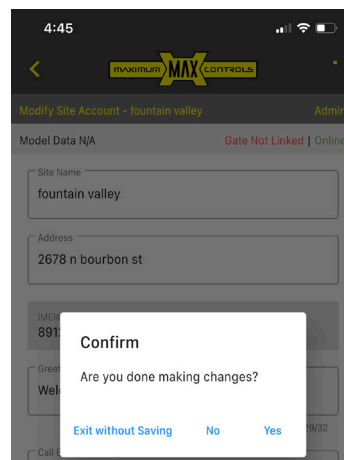


1 Press **Settings** icon in the main menu

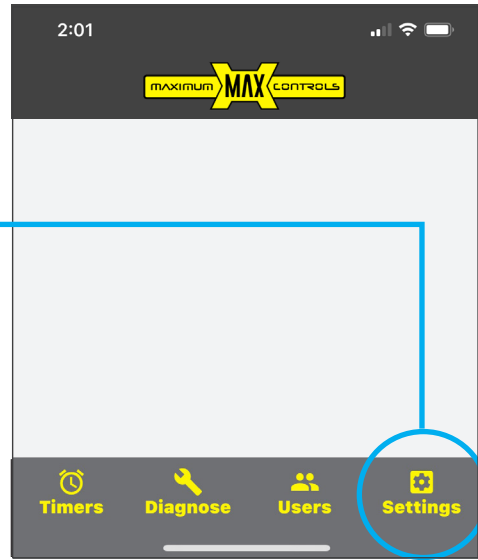


2 Setup Call Button

Go to the **Call Button** area and type the message that may instruct the visitor to call a specific phone number (i.e. facility manager or home owner) using their personal cell phone. **Example CALL** button message: **"CALL (949) 000-0000 on your phone"**.

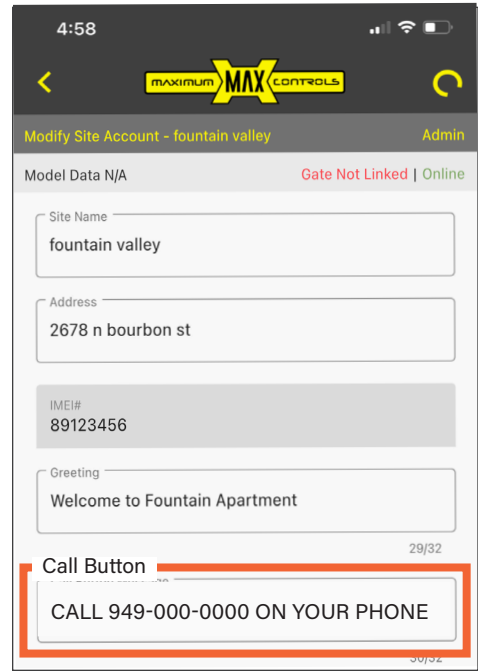


CALL
Button

3 Press the **back button** [←] on the top left of the screen to confirm changes

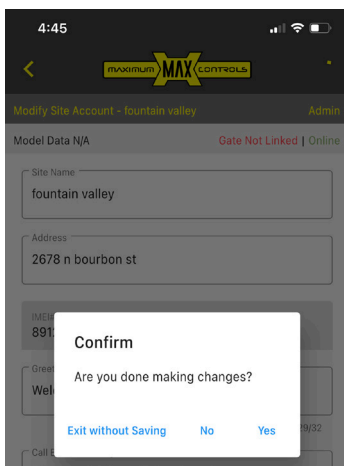

1 Press **Settings** icon in the main menu

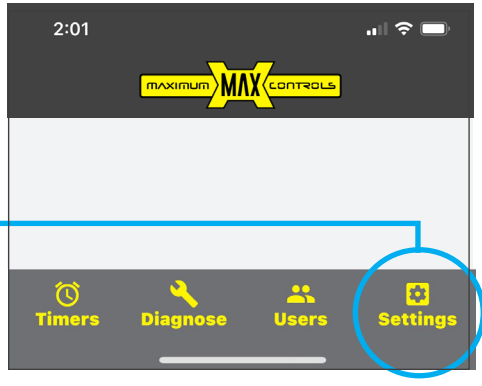


Only one force open keycode can be programmed per gate site


Force open a problematic gate using this special keycode on Max keypad. This will Jog the gate open by overriding the UL sensors of Max operator

2 Setup Force Open Keycode

Go to the **Force Open Keycode** area and type the code of your choice, limited to 5 numeric characters

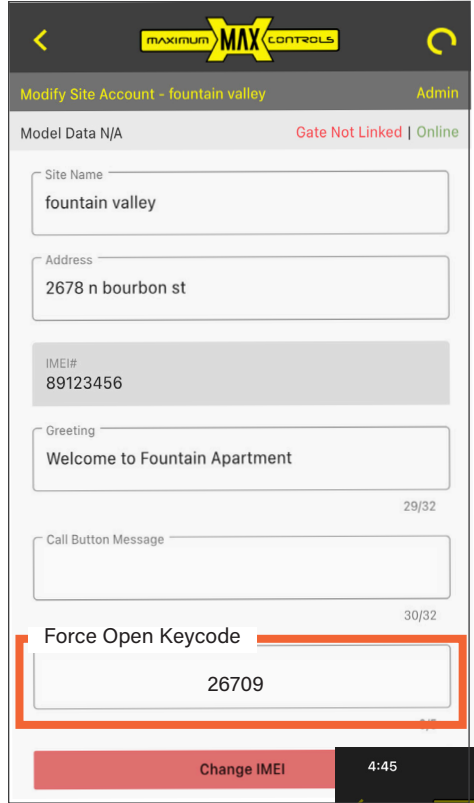

3 Press the **back button** [**<**] on the top left of the screen to confirm changes

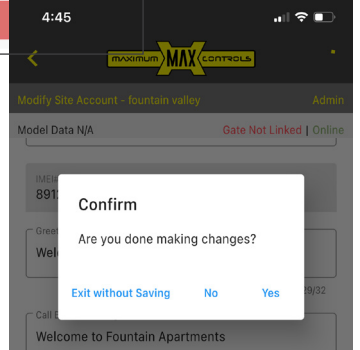


4 Force Open Mode


- a. Enter your force open keycode on keypad. Keypad will then enter force open mode.
- b. Press and hold 0 key on keypad to jog gate to open position (overriding UL sensors).




1 Press **Users** icon in the main menu

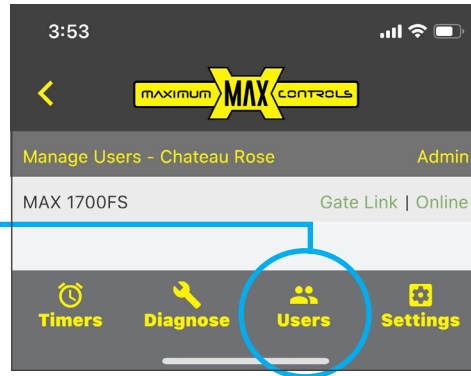

2 Then Press **Add a User** in the following menu

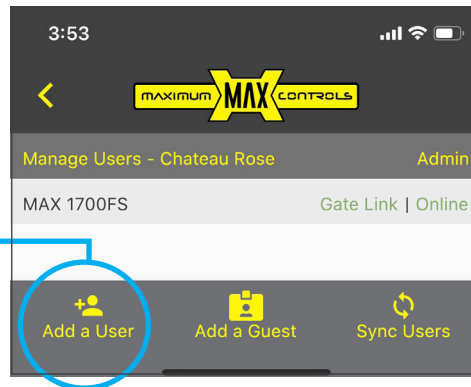

3 Enter **Name** of your visitor, then assign a **5 digit keycode**

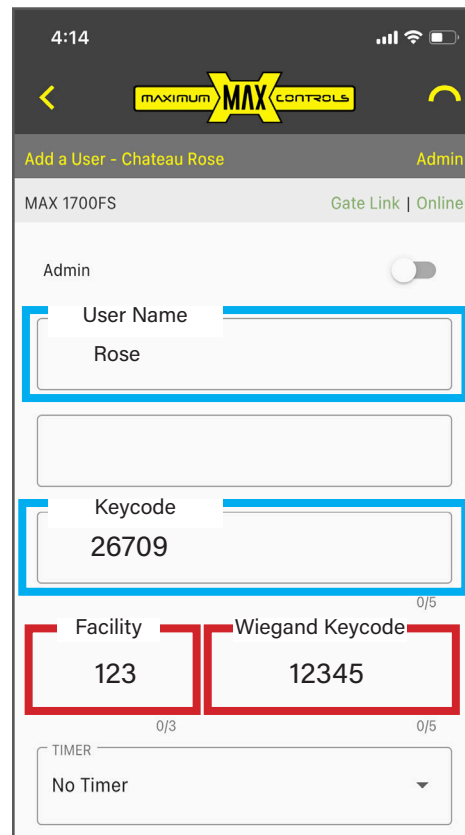



4 Program Wiegand Keycode
 If a Wiegand device is wired to keypad wiegand port then enter **Facility and Wiegand Keycode for the transmitter, keyfob or tag**

5 Assign a timer (OPTIONAL)

Choose one of six timer schedules

These time restrictions apply to both keycode and Wiegand keycode


If you choose No Timer
Keycode has no time restriction

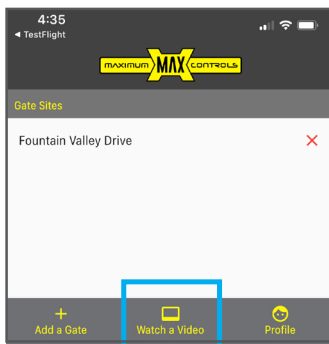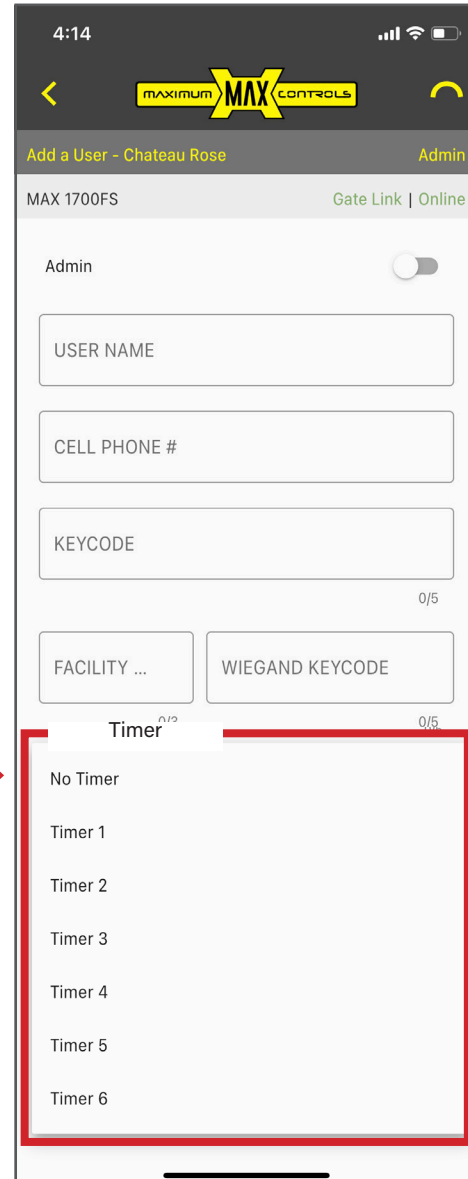

Watch video tutorials from Max Cloud App, just go to the home screen

Applying restrictive time period to keycodes improves the security to your gate site

6 Press the **back button** [<] on the top left of the screen to confirm create a user

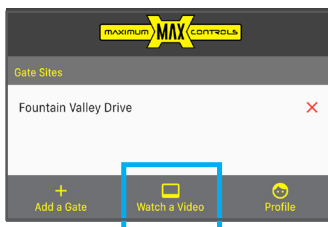

Watch video tutorials from Max Cloud App, just go to the home screen

OR

SCAN CODE
to watch tutorial




QUICK INSTALLATION GUIDE

MAX KEYPAD

RESIDENTIAL / COMMERCIAL APPLICATION

INTEGRATED ACCESS CONTROL

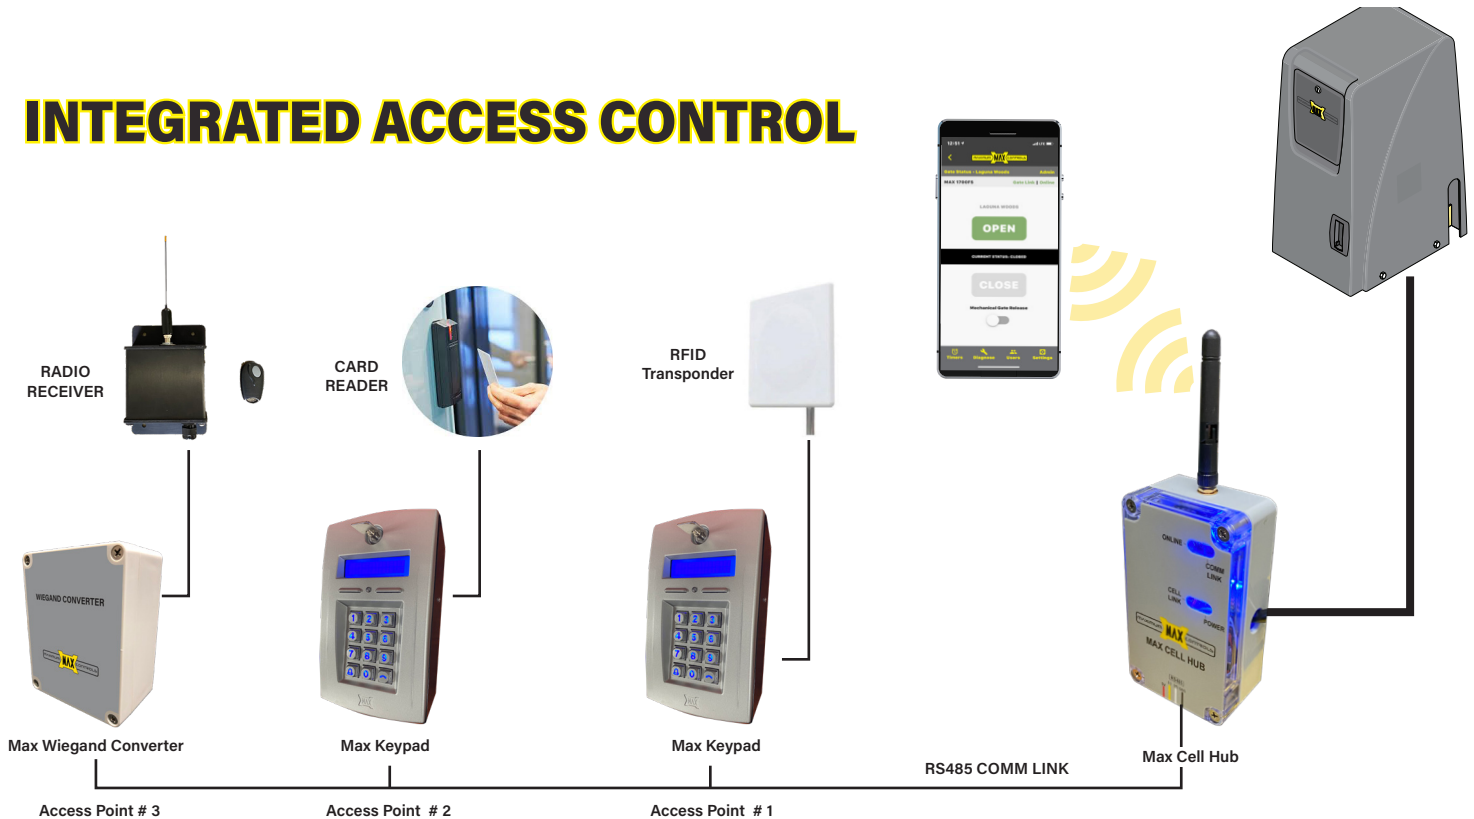

**Max Hub can support up to 16 access points
using Max Keypads and/or Max Wiegand Converter Units**

- *Wiegand Keycodes* with optional time zone restrictions
- *Keypad Keycodes* with optional time zone restrictions
- *Virtual Transmitters* (App Users) with optional time restrictions
- *Guest Passes* with date and time restrictions
- *Auto Open / Close Timer* to set daily recurring schedule for gate operator
- *Text Alerts* on App for gate status, gate tamper and sensor fail events
- *EVENT LOG* to track gate site events on App. Events tracked includes:
 - Max Cloud App OPEN commands
 - Guest Pass OPEN commands
 - Keypad keycode entries
 - Wiegand keycodes scans
 - All programming changes
- *ERROR LOG* to monitor and diagnose gate operator issues remotely

