


Optional Board for the OmniControl Board

**QCC Optional - Access ID Socket
Designed for Slide Gate Operators Only!**

QCC Mode of Operation Switch

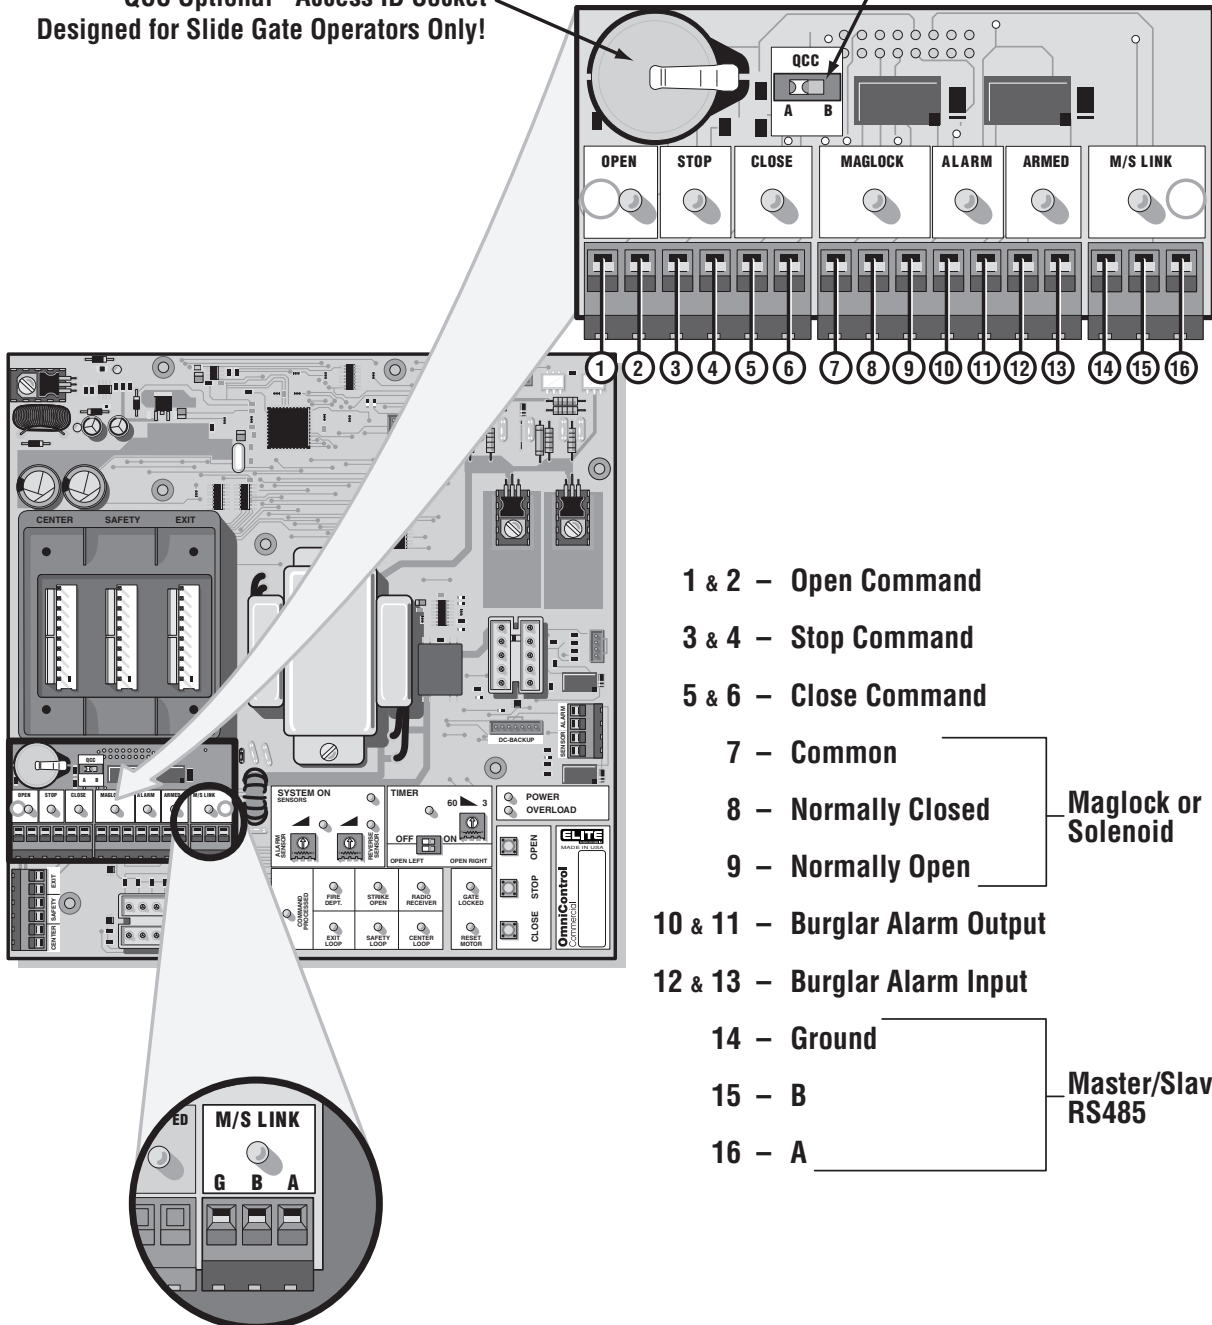

- 1 & 2 – Open Command
 - 3 & 4 – Stop Command
 - 5 & 6 – Close Command
 - 7 – Common
 - 8 – Normally Closed
 - 9 – Normally Open
 - 10 & 11 – Burglar Alarm Output
 - 12 & 13 – Burglar Alarm Input
 - 14 – Ground
 - 15 – B
 - 16 – A
- Maglock or Solenoid
- Master/Slave RS485

**Use this socket when
Master/Slave option is needed.**

