
Q-1000 Series Quick Install Guide

Download latest reader setup software from www.maxtekrfid.com

TOP VIEW

READER

- 1. Install a 2" OD post. Post height should allow reader center at approximately 7' from road surface.
- 2. Assemble and install reader bracket, see fig1.

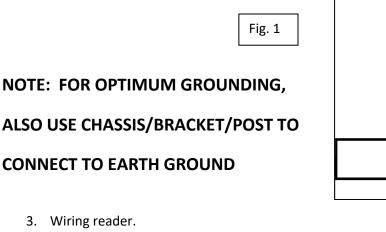

Follow diagram in figure 2 and/or label on back of reader.

Use the included power supply of 12VDC 2AMP rating. Do not modify factory harness. Contact us for longer lengths/ support@maxtekrfid.com

Power Supply Output +12Vdc ----- Red/Pink

- Negative ----- Orange/Purple

READER HARNESS	1. +12VDC 2AMP 2. – NEGATIVE	RED/PINK ORANGE/PURPLE	EARTH GROUND
	3. OPTIONAL 4. OPTIONAL 5. OPTIONAL		Use Chassis,
Fig. 2	 6. LOOP COM/Reader COM 7. LOOP N/O /Reader ON/OFF 8. WIEGAND D0 9. WIEGAND D1 10. WIEGAND GND 11. RELAY COM 12. RELAY N/O 	YELLOW BLUE GREEN WHITE BLACK GRAY LIGHT/BROWN	bracket or post for optimum Earth grounding

- 4. Verify wiring, voltage and power up reader. Using the supplied USB cable, connect PC/Laptop to reader's USB port located at bottom of reader. READER IS PRE-CONFIGURED FOR OPTIMUM RESULTS. NOTE: If NOT using a loop detector to trigger reader then connect yellow and blue wires together.
- 5. If required, Install reader configuration software from <u>www.maxtekrfid.com</u> if not previously installed.
- 6. Download latest reader setup software from <u>www.maxtekrfid.com</u>.
- 7. Follow instructions and install software.
- 8. After successful software installation, connect USB cable and power up reader. Start software and Click Find Reader, then click Connect,. Software will automatically download reader settings.

NOTE: Right click on any button on software to view help for that selection.