QUICK SETUP GUIDE:



IMPORTANT: It is recommended to BENCH TEST this unit by performing the Quick setup procedures below, adding a new user(s) and testing communications. In this manner, if there are any communication concerns experienced after the installation, troubleshooting efforts can be focused towards evironmental variables.








ELIKA 460 **REQUIRES ACTIVATION** BEFORE USE.

FOLLOW THE PROMPTED
INSTRUCTIONS AT:

www.elikacloud.com

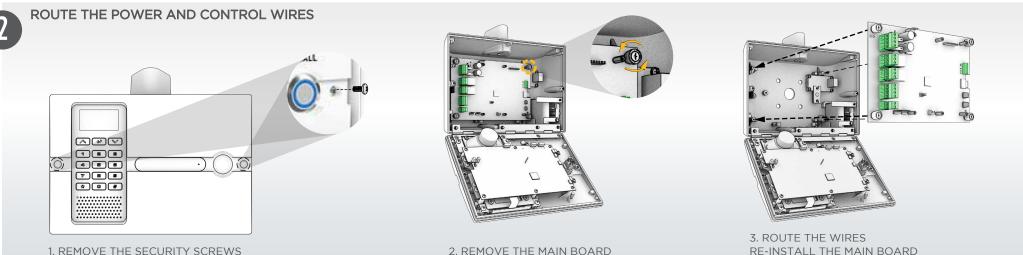



AUTOMATIC GATES CAN CAUSE SERIOUS INJURY OR DEATH!


THE GATE PATH MUST BE CLEAR BEFORE OPERATING!

SAFETY DEVICES SHOULD BE INSTALLED TO ENSURE PROPER USE.

QUICK SETUP GUIDE:



IMPORTANT: It is recommended to BENCH TEST this unit by performing the Quick setup procedures below, adding a new user(s) and testing communications. In this manner, if there are any communication concerns experienced after the installation, troubleshooting efforts can be focused towards evironmental variables.

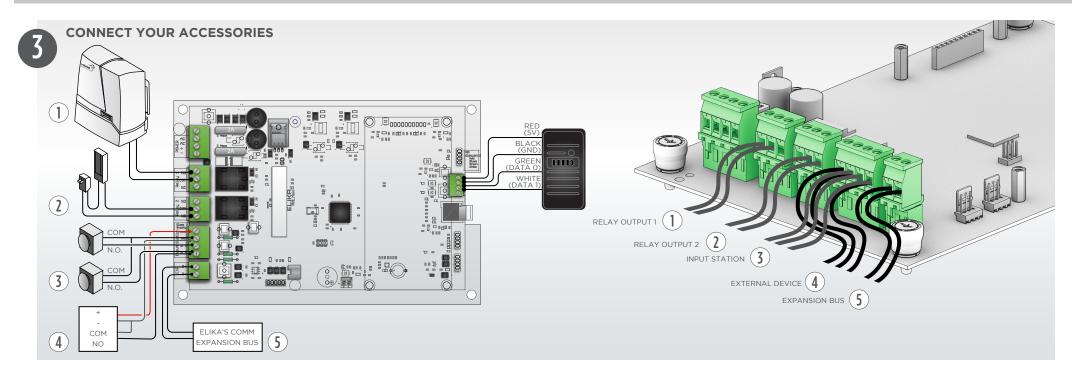



ENSURE THAT ALL COMPONENTS ARE PROPERLY CONNECTED AND MOUNTED TO THE UNIT.

FOR ADDITIONAL INFORMATION REGARDING INSTALLATION REFER TO THE MANUAL.



STOP!

CONFIRM THAT THE UNIT HAS THE PROPER POWER BEFORE TRYING TO OPERATE.

FOR ADDITIONAL INFORMATION ON POWER OPTIONS REFER TO THE INSTALLATION MANUAL.

