

# D-TEK™

## VEHICLE LOOP DETECTOR



**D-TEK Vehicle Loop Detector**

Pin	Function	Harness
1	Power	Black
2	Power	White
3	Relay 2 N.O	Orange
4	Ground	Green
5	Presense Com.	Yellow
6	Presense N.O.	Blue
7	Loop	Gray
8	Loop	Brown
9	Relay 2 Com.	Red
10	Presense N.C.	Pink
11	Relay 2 N.C.	Violet

**EPIX Industries Inc.**  
4564 Johnston Parkway  
Cleveland, OH 44128  
Web: [www.emxinc.com](http://www.emxinc.com)  
Made in USA  
Refer to the operating manual for details.



4564 Johnston Parkway, Cleveland, Ohio 44128

P. 800 426 9912 F. 216 518 9884

**Sales Inquiries:** [salesupport@emxinc.com](mailto:salesupport@emxinc.com)

**Technical Support:** [technical@emxinc.com](mailto:technical@emxinc.com)

[www.emxinc.com](http://www.emxinc.com)

# Contents

<b>Cautions and Warnings</b>	<b>2</b>
<b>Product Overview</b>	<b>2</b>
<b>Specifications</b>	<b>3</b>
<b>Operation</b>	<b>4</b>
<b>Controls and Indicators</b>	<b>6</b>
<b>Connections</b>	<b>7</b>
<b>Troubleshooting</b>	<b>8</b>
<b>Installation</b>	<b>9</b>
<b>Ordering Information</b>	<b>10</b>
<b>Warranty</b>	<b>11</b>

## Cautions and Warnings



This product is an accessory or part of a system. Always read and follow the manufacturer's instructions for the equipment you are connecting this product to. Comply with all applicable codes and safety regulations. Failure to do so may result in damage, injury or death!

## Product Overview

The D-TEK™ Vehicle Loop Detector allows for detection of metallic objects entering into the field formed around the detection loop. We have designed the D-TEK with the following objectives in mind:

1. Compact package to allow easy installation into small operator housings.
2. All controls are accessible from the outside for easy installation and operation.
3. Integral loop conditioner is provided, to enable detector operation with marginal loops.
4. Provide all features and controls necessary for a variety of applications.
5. Use metal housing for maximum durability and RF resistance.
6. Provide maximum surge protection on all inputs and outputs of the detector.

We took extra care to achieve and exceed these objectives. For example the controls are divided into two groups. The group on the front of the detector is for basic operation and the group on the back of the detector is for advanced settings. This way the more advanced settings are not visible to the casual user.

The D-TEK is made from aircraft quality anodized aluminum and all switches have gold plated contacts that are sealed for protection. The circuit is protected by an advanced thermal resettable fuse, snubbing circuitry on the relay contacts, Metal Oxide Varistor on the power input and triple protection on the loop input.

The D-TEK features are extensive and include full loop diagnostic with frequency counter, 10 sensitivity settings, delay and extend features, fail safe and "fail secure" operation, automatic sensitivity boost, pulse or two presence relay operation and more.

## Specifications

Specifications	
<b>Power Supply</b>	12Volt DC, 24 Volt AC, 24 Volt DC, 120Volt AC, 220 Volt AC
<b>Power Supply Tolerance</b>	+/- 20% of power rating
<b>Current Draw</b>	100 mA maximum
<b>Housing Material</b>	Extruded Anodized Aluminum H=3.25"(83mm), W=2.56"(40mm) D=3.65" (90mm)
<b>Relay Type</b>	(2) DPST 5A@125VAC
<b>Temperature Range</b>	-40 to 180 Degrees Fahrenheit
<b>Connector</b>	11 Pin Octal compatible with DIN rail mount socket or wire harness
<b>Loop Inductance Range</b>	20 to 2000 micro henries with "Q" factor of 5 or higher
<b>Loop Input</b>	Transformer Isolated
<b>Power On Indicator</b>	Green T-1 LED
<b>Detect Indicator</b>	Red T-1 $\frac{3}{4}$ LED
<b>Surge Protection</b>	MOV, Neon and Silicon Protection Devices
<b>Tuning</b>	Detector automatically tunes to the loop after the power application or reset
<b>Tracking</b>	Detector automatically tracks and compensates for environmental changes
<b>Environmental Protection</b>	Circuit board is conformal coated to resist moisture
<b>Frequency Counter</b>	Counts Loop frequency, each blink represents 10KHz. Counts between 3 to 13 blinks confirms that the detector is tuned to the loop.
<b>Power Indicator</b>	Solid lighted green LED indicates power
<b>Loop Failure Indicator</b>	Slow blinking green LED indicates loop failure
<b>Loop Failure Memory</b>	Fast consecutive green blinking LED indicates past loop problems that healed
<b>Detect Indicator</b>	Solid lighted red LED indicates detection
<b>Extend Indicator</b>	Blinking red LED after vehicle leaves the loop indicates time extend
<b>4 minute limit</b>	Blinking red LED during vehicle detection indicates that 4 minute limit has expired.

# Operation

## Reset Switch

When this toggle switch is momentarily pressed down toward the “Frequency Switch” and released will cause the D-TEK to reboot.

## Frequency Switch

This 3-position toggle switch is used to change the loop operation frequency to High/Medium or Low. This helps to prevent cross talk with adjacent loops and possible interference from other sources in the same operational frequency. Note: When the frequency is changed the D-TEK must be re-set.

## Frequency Counter

When this toggle switch is momentarily pushed up toward the power and detect LEDs will cause the detector to blink the red “Detect” LED. Each blink of the LED indicates a frequency multiple of 10 KHz. (example 5 blinks = 50 KHz.) Counts from 3 to 13 confirm that the detector has tuned to the loop.

## Sensitivity

This rotary switch controls the detector sensitivity. During normal operation the sensitivity setting is 3 or 4. Note: the higher the sensitivity the more prone the detector will be to interference. To increase detection height without increasing the detector sensitivity settings, increase the size of the loop. Detection height is roughly 70% of the shortest side of the loop. (example 4 x 8 loop = approximately 33 inch detection height and a 6 x 8 loop = approximately 50 inch detection height.)

## ASB

Automatic Sensitivity Boost is activated by DIP switch 6 on the back of the detector. This allows the detector to be set at a “standby” sensitivity and when detection occurs sets the sensitivity to maximum until the unit un-detects. This allows for the use on high bed vehicles that might otherwise un-detect while still in the loop.

## Pulse/Presence relay 2

This feature is controlled by DIP switch 2 on the back of the detector and allows relay 2 to act in the pulse mode or as a second presence mode relay mimicking relay 1.

## Operation (continued)

### Pulse Detect/Un-detect

This feature is controlled by DIP switch 2 on the back of the detector. Allows for activation on entering into the loop or exiting from the loop.

### Constant Presence / 4 minute limit

This feature is controlled by DIP switch 3 on the back of the detector and allows for the detector to hold the activation for as long as any vehicle is in the detection loop or to allow the relay to de-activate after 4 minutes. **Warning!** DO NOT USE 4 minute limit unless opening is protected by a secondary safety device such as the IRB-4X.

### Fail Safe / Fail Secure

This feature is controlled by DIP switch 4 on the back of the detector. Normal factory setting is "Fail Safe" which allows the detector to hold the gate open in the event of a failure or loss of power on the detector. "Fail Secure" setting will force the detector to not change states on power loss or power up. **Warning!** This setting should not be used for safety reversing of gates, doors or barriers. **Note:** Function output on pins 6 and 10 are reversed if DIP switch 4 is turned off.

### Filter

This function is controlled by DIP switch 5 on the back of the detector. This feature inputs a momentary delay into the detection circuit to verify that a vehicle is present in the loop for a minimum time period before activation occurs.

### Extend Detect

This feature is controlled by DIP switches 7 and 8 on the back of the detector. Turning on switch 7 allows for a 6 second extension of the detection after the vehicle leaves the loop. Turning on switch 8 allows for a 3 second extension of the detection after the vehicle leaves the loop. Turning on both switches 7 and 8 allows for a 9 second extension of the detection after the vehicle leaves the loop.

## Controls and Indicators

### Front

Function	Indicator/Control	Description
Power	LED	Green T-1 Glows when power is applied
Detect	LED	Red T-1¾ Glows to indicated detection
Frequency Counter	Momentary Switch	Pull up towards Power LED and release
Reset	Momentary Switch	Push down towards Freq. and release
Frequency	Three position Switch	Low, High, Medium. Unit must be reset after any change

### Sensitivity

### BCD Switch

0,1,2,3,4,5,6,7,8,9 must be on a number

### BACK

#### DIP Switch Functions


	OFF	ON
1	Pulse on Relay 2	Presence on Relay 2
2	Pulse on Detect	Pulse on Un-detect
3	Constant Presence	4 Minute limited presence time
4	"Fail Secure"	"Fail Safe"
5	Filter OFF	Filter On
6	ASB OFF	Automatic Sensitivity Boost
7	Extend Detect	6 seconds
8	Extend Detect	3 seconds
DIP 7 & 8 ON extend time is 9 seconds		

## Connections

Connector pin	Description	86CP11 Pin Connector Harness
1	Power +	White
2	Power -	Black
3	Relay 2 N/O (Pulse or Presence)	Orange
4	Earth Ground	Green
5	Presence Relay (1) COM	Yellow
6	Presence Relay (1) N/O	Blue
7	Loop (Twisted leads)	Gray
8	Loop (Twisted leads)	Brown
9	Relay 2 COM (Pulse or Presence)	Red
10	Presence Relay (1) N/C	Pink
11	Relay 2 N/C (Pulse or Presence)	Violet

**NOTE:** Pin 4 must be connected to earth ground for surge protection to be effective

**NOTE:** Functions on pins 6 and 10 are reversed if DIP switch 4 is set to OFF "Fail Secure" operation

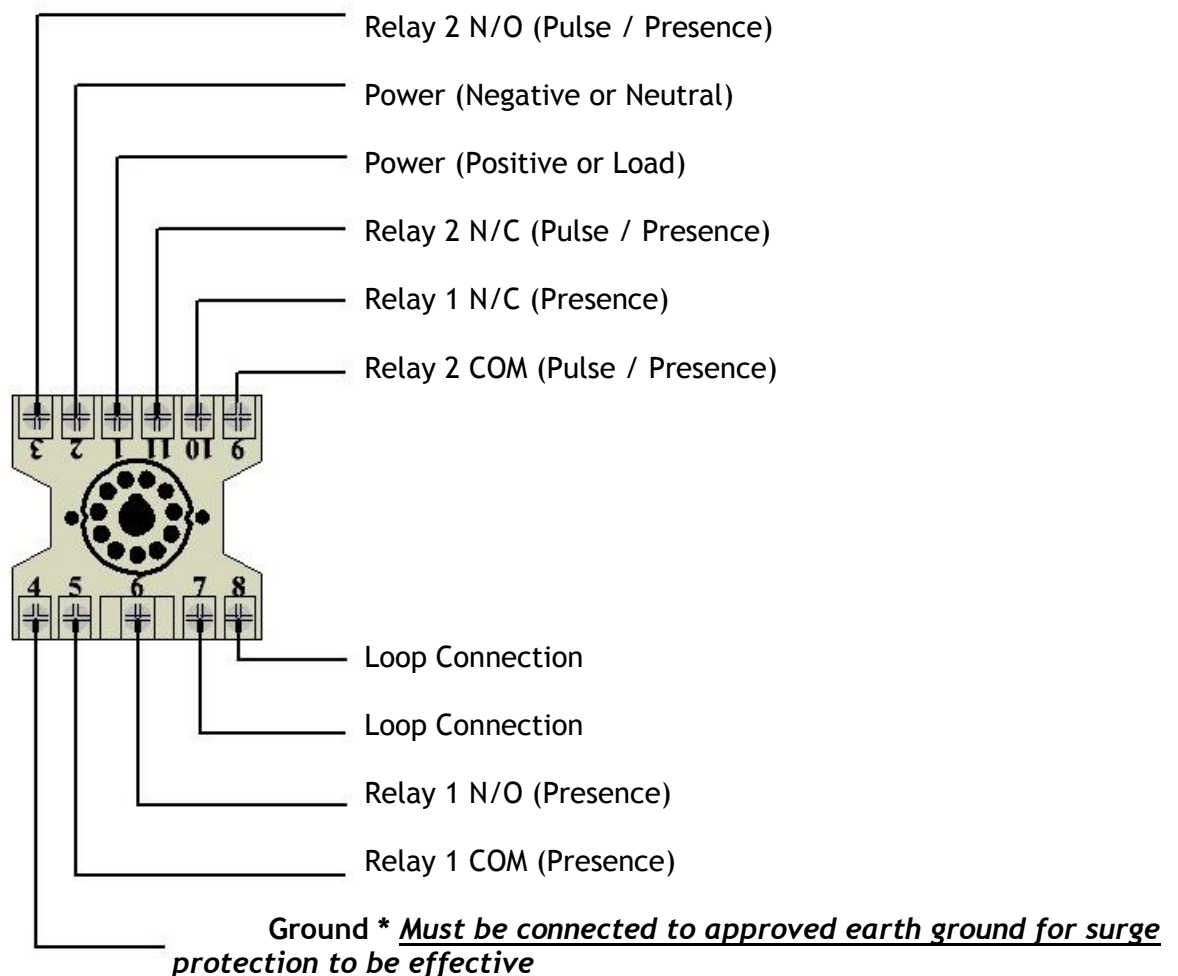



## Troubleshooting

Symptom	Possible cause	Solution
Green Indicator is not lit	No input voltage	<ol style="list-style-type: none"> <li>1. Check voltage on pins 1 and 2</li> <li>2. Check wiring to detector.</li> <li>3. Verify voltage used matches voltage marked on unit</li> </ol>
Green Indicator flashes	Loop wire shorted or disconnected	Check loop resistance on pins 7 & 7, it should be less than 5 ohms and more then 0.5 ohms.
Green Indicator flashes with two consecutive fast blinks	Loop wire was temporarily shorted or disconnected	Check loop resistance on pins 7 and 8, it should be less than 5 ohms and more than 0.5 ohms. The reading should be steady.
Detector stays in detect mode after the vehicle leaves the loop and fails to un-detect.	<ol style="list-style-type: none"> <li>1. Faulty loop</li> <li>2. Poorly crimped connections</li> <li>3. Loose connections</li> </ol>	<ol style="list-style-type: none"> <li>1. Perform megger test from loop lead to ground, should be &gt;100 mega ohms</li> <li>2. Check loop connections to terminals</li> <li>3. Check splices are properly soldered and sealed against moisture</li> </ol>
Detector detects intermittently even when there is no vehicle on the loop	<ol style="list-style-type: none"> <li>1. Faulty loop</li> <li>2. Poorly crimped terminals</li> <li>3. Loose connections</li> <li>4. Cross-talk between adjacent loop detectors</li> <li>5. Loop not securely installed to prevent movement of wire in pavement</li> </ol>	<ol style="list-style-type: none"> <li>1. Perform megger test between loop lead and ground, the reading should be greater than 100 mega ohms.</li> <li>2. Check that loop is tightly connected to terminals</li> <li>3. Check that splices are tightly soldered and sealed against moisture</li> <li>4. Set adjacent loops to different frequencies.</li> <li>5. Verify that loop is securely installed in pavement and that site is in good condition preventing movement of loop wires.</li> </ol>

## Installation

1. Connect the D-TEK to appropriate power supply as marked on the label of the detector on pins 1 and 2 according to the connection chart on page 3 of this manual.
2. Connect the loop wires to pins 7 & 8 (Brown and Gray wires in harness) The D-TEK must be connected to a loop meeting the appropriate requirement listed on page 2.
3. Connect the desired relay outputs to the operator control board inputs. Relay 1 is a "Constant Presence" and Relay 2 is "Pulse" or "Constant Presence".
4. Adjust sensitivity to desired level to assure detection of all vehicle traffic. Factory set is normally 3 or 4.
5. Pin 4 (GREEN WIRE) must be connected to earth ground for effective surge protection.
6. Do not install the loop wire near or parallel to:
  - a. Low voltage lighting
  - b. Telephone lines
  - c. Underground power lines
  - d. Electrical pavement heaters
  - e. Cell phone towers or radio communication systems
  - f. Overhead power lines
  - g. Transformers
7. To install the loop into new concrete with re-bar or wire mesh we recommend that the loops be installed at least 1 inch above the re-bar.
8. When installing in saw cut we recommend the use of backer rod and a good grade sealant for the type of surface.

## Ordering Information

- **D-TEK-24A** 24 Volt AC powered detector
- **D-TEK-110** 120 Volt AC powered detector

## Accessories

- **PR-XX** EMX lite pre-formed loop
- **HAR-11** 11 wire harness with 3 ft. of wire
- **LD-11** 11 pin DIN rail socket (gray)
- **LD-11B** 11 pin DIN rail socket (black)

## Warranty

EMX Industries Incorporated warrants all products to be free of defects in materials and workmanship for a period of two years under normal use and service from the date of sale to our customer. This warranty does not cover normal wear and tear, abuse, misuse, overloading, altered products, damage caused by incorrect connections, lightning damage, or use other than intended design.

There is no warranty of merchantability. There are no warranties expressed or implied or any affirmation of fact or representation except as set forth herein.

EMX Industries Inc. sole responsibility and liability, and the purchaser's exclusive remedy shall be limited to the repair or replacement at EMX Industries option of a part or parts found not conforming to the warranty. In no event shall EMX Industries Inc. be liable for damages, including but not limited to damages resulting from non-conformity, defect in material or workmanship.

Effective date: January 1<sup>st</sup>, 2002



**BLANK PAGE**

**BLANK PAGE**



4564 Johnston Parkway  
Cleveland, Ohio 44128  
United States of America  
[www.emxinc.com](http://www.emxinc.com)

Technical Support: (216) 834-0761  
[technical@emxinc.com](mailto:technical@emxinc.com)

Sales: (216) 518-9888  
Fax: (216) 518-9884  
[salesupport@emxinc.com](mailto:salesupport@emxinc.com)



Revision 1.3  
3.13.2018