


RCS-295R

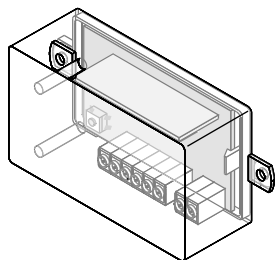

MANUAL
INSTALLATION

RCS

Thank you for choosing a RCS product. You are recommended to read this manual carefully before installing the product.

CONTENTS

1- RECEIVER INTRODUCTION

- 1A Description
- 1B Usable transmitters
- 1C Technical specifications
- 1D Receiver layout
- 1E Terminal board connections

2- FACTORY SETTINGS

3- TRANSMITTER MEMORIZATION

4- DEFAULT RECEIVER CONFIGURATION

5- FACILITY CODE CHECK DISABLING

6- MEMORY ERASURE

7- WIEGAND SIGNAL FORMAT

1- RECEIVER INTRODUCTION

1A - Description


The receiver RCS-295R type SELWR295 is a superheterodyne receiver operating at the frequency 295 MHz. It is composed by a main board in which there are the power supply output connectors and by a RF card. The two outputs have an open drain configuration with output signal in "Wiegand 30 bit format". The appliance is housed in an indoor container.

1B - Usable transmitters

- RCS-295T Type SETW 295AM2: 2 key transmitter

1C - Technical specifications

Receiver type:	Superheterodyne.
Demodulation:	AM/ASK.
Operating frequency:	295 MHz.
Local oscillator frequency:	4,7766 MHz.
Intermediate frequency:	10,7 MHz.
Sensitivity:	-117 dBm.
Input impedance:	50 Ohm.
Power supply :	12 ÷ 24 V ac/dc.
Current consumption:	24 mA
Output s number:	2.
Output type:	Wiegand.
Max output current	250 mA
Operating temperature:	-20 ÷ + 70 °C.
Overall dimensions:	105 x 45 x 28 mm.
Weight:	65 gr.
IP Protection Grade:	IP2X

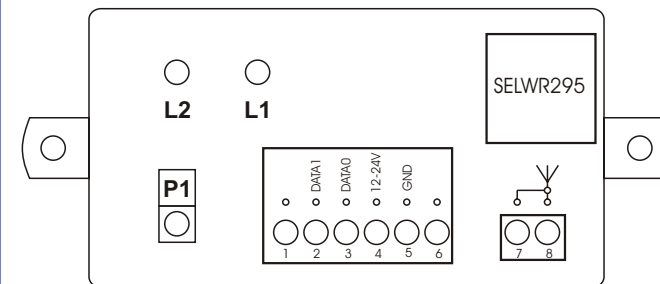

1D - Receiver Layout

P1 : Programming button
L2 : Red led (programming)
L1 : Green led (power supply)

1E - Terminal board connections

- 1 - Not used;
- 2 - Output DATA1 (Open collector);
- 3 - Output DATA0 (Open collector);
- 4 - Power Supply (12 ÷ 24 Vac/dc);
- 5 - Power GND;
- 6 - Not used;
- 7 - Antenna Shield;
- 8 - Antenna Core.



IMPORTANT

The receiver allocation is very important for the best operation of the system. Place the receiver far from interference sources such big magnetic fields or radio emissions. The installation and the positioning of the antenna is very important as well. Before installing the antenna it is advisable to make some tests on the site. Use shielded cable type Rg58 (impedance 50 Ohm) for the antenna connection.

2- FACTORY SETTINGS

The information contained in the frame sent by the transmitter is composed by a FACILITY CODE , a KEY CODE and by a SERIAL NUMBER.

The set-in-factory receiver doesn't accept any code.

That means that no wiegand formatted signal is carried out from the receiver unless a memorization procedure is performed.

Follow the procedure below to memorize the transmitter codes

2- TRANSMITTER MEMORIZATION

Before commencing the procedure make sure that the power led L1 is ON.

The EEPROM of the receiver is capable to store up to 50 different combinations: "facility code - Key code".

The key codes of each transmitter can be A, B,A+B, where A+B is the code sent at the pressure of both the keys at the same time.

Combinations of this type can be, for example:

002 - A, 002 - B, 002 - (A+B), 003 - B, 010 - (A+B), and so on.

PART 1: transmitter key A programming

- 1) Keep the button P1 pressed down until the led L2 turns on and then release it.
- 2) Press the key A of the transmitter which has to be memorized.
- 3) The led L2 turns off and then make a short flash.

PART 2: transmitter key B programming

- 1) Keep the button P1 pressed down until the led L2 turns on and then release it.
- 2) Press the key B of the transmitter which has to be memorized.
- 3) The led L2 turns off and then make a short flash.

PART 3: transmitter key A+B programming

- 1) Keep the button P1 pressed down until the led L2 turns on and then release it.
 - 2) Press at the same time the keys A and B of the transmitter which has to be memorized.
 - 3) The led L2 turns off and then make a short flash.
- If, for any reason, the memorization procedure hasn't been successfully, the led L2 doesn't make the final flash.

Any operation not allowed (memorization with full memory,

4- FACILITY CODE CHECK DISABLING

It is possible to disable the check performed by the receiver on the facility code of the received signal.

At the end of the following procedure, the receiver accepts any facility code and maintains the check on the key code. This new configuration of the receiver is temporary and can be restored by carrying on the same procedure.

- 1) Keep the button P1 pressed down until the led L2 turns on and then release it.
 - 2) Within 1 sec. press again P1.
- At this point the led L2 start to flash quickly and so the receiver can accept any facility code. Repeat the phases 1 and 2 to cancel the operation and to recover the initial state.
- If a power failure occurs after the phase2 the new configuration is maintained.

5- VISUALIZATION

- A short flash of L2 indicates a correct received word but not approved : that means that the facility code or the transmitter code received is wrong.
- A flash of 1 second of L2 indicates that a correct signal has been received and that the correct frame in wiegand format has been sent from the outputs DATA0 and DATA1.

6- MEMORY ERASURE


This procedure allows to erase the memory of the receiver.

- 1) Keep button P1 pressed down until L2 turns on.
- 2) Release P1 and then press it again until L2 start to flash 3 times.

At this point the settings stored are cancelled, and the receiver

7- WIEGAND SIGNAL FORMAT

The timing of the signals DATA0 and DATA1 are the following:

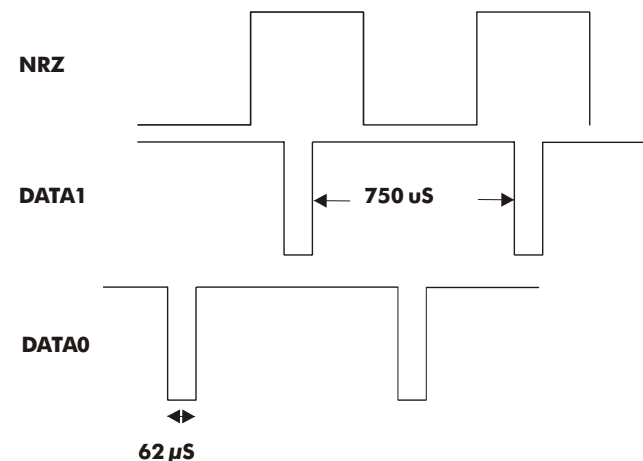

Notice

Any changes or modifications on RCS equipment not expressly approved by RCS could void the user's authority to operate with the equipment.

GUARANTEE

The guarantee period of all RCS radio receivers is one year, beginning from the manufacturer date. During this period, if the product does not work correctly, due to a defective component, the product will be repaired or substituted at the discretion of the producer. The guarantee does not cover the plastic container integrity.

REMOTE CONTROL SOLUTIONS
College Park Commerce Center
2042 N. Rio Grande Ave. Suite A
Orlando - FL 32804
U.S.A.
Office: (407)-426-8687
Fax: (407)-428-9309
e-mail: bettertx@msn.com