

WXL Pedestal and Flush Mount

2022

Quick Install Guide AA1XLPE ATT, AA1XLPE VZN, AA1XLPE INT, AA1XLPE VPN

AA1XLSM ATT, AA1XLSM VZN, AA1XLSM INT, AA1XLSM VPN



Items Included in Kit

The following items are included in your WXL delivery.

- 1. Watchman XL Unit
- 2. 12 Volt DC Power Supply
- 3. Magnetic Read Switch
- 4. Kevs

Wiring Examples

NOTE Leave one key with the customer.

- 5. Nuts X 4
- 6. Bolts X 4
- 7. Install Guide
- 8. Customer Information Packet

Watchman XL Unit **Power Supply Wiring** Interface Router Circuit Board 12 V+ Ethernet Terminal Switch 12 V-Terminal Do not remove SIM card NOTE from the in-hand modem. Recommended wiring: 18/6 shielded for main device, and 18/4 shielded for optional Wiegand devices.

Interface Circuit Board

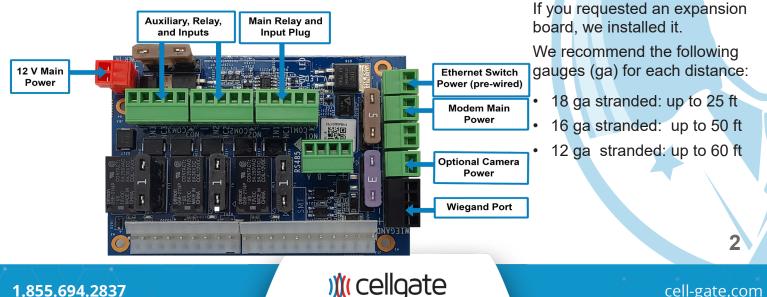


Image: w marked by mar




) (cellgate

cell-gate.com






Interface Wiring Diagram Oriented the same as the Watchman install

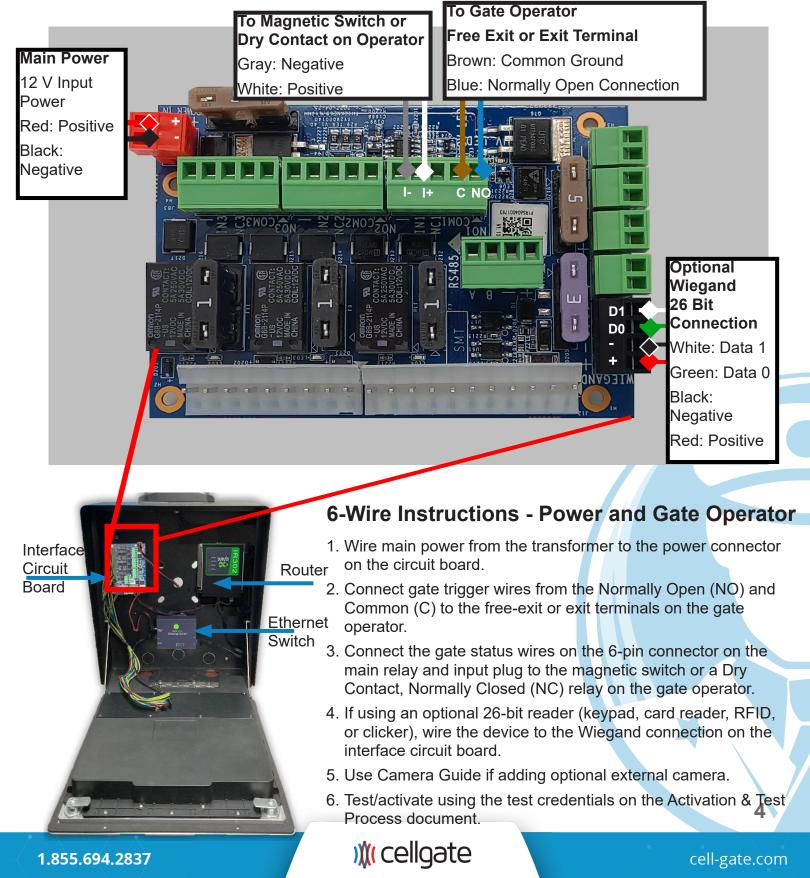




▶y)**)(** cellgate

Wiring with Transformer

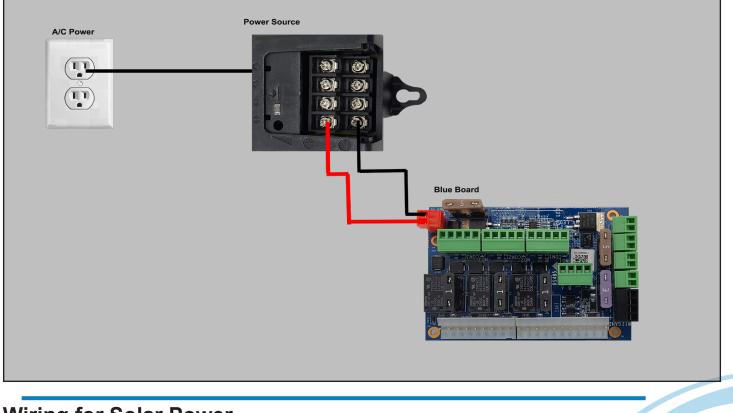


Wiring for Solar Power

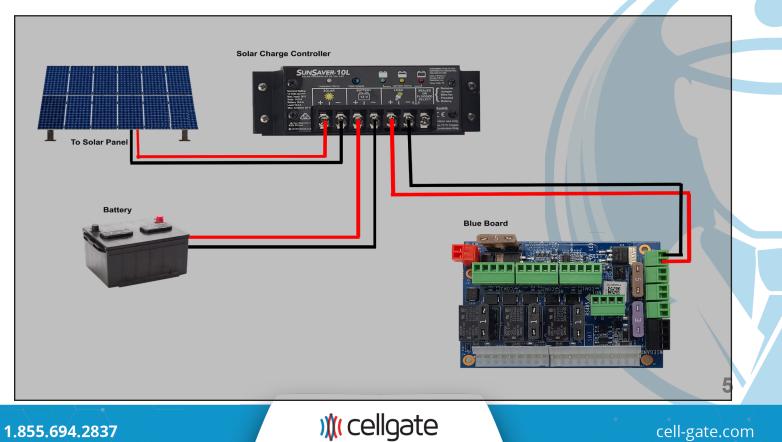




Dry Contact Relay, Normally Open Dry Contact No Voltage to Lock or Gate

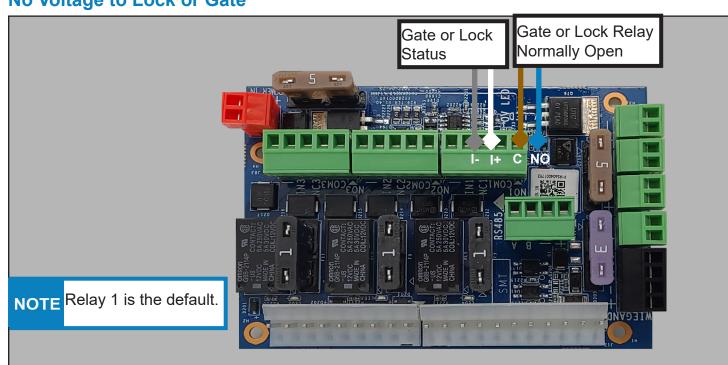


Dry Contact Relay, Normally Closed Dry Contact No Voltage to Lock or Gate

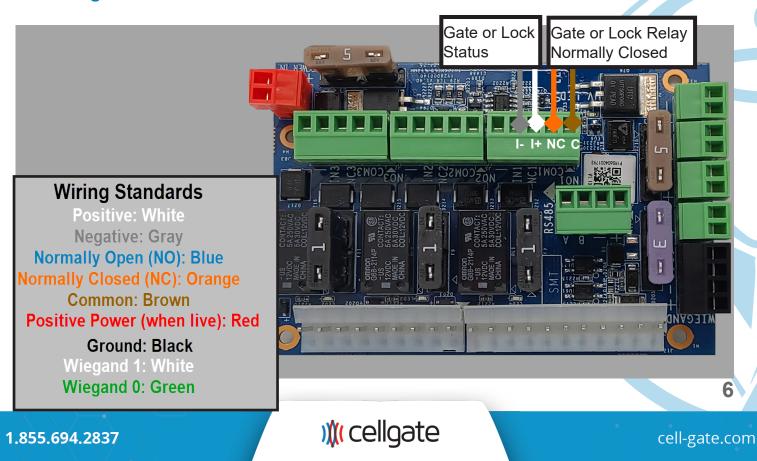




by)≬(cellgate

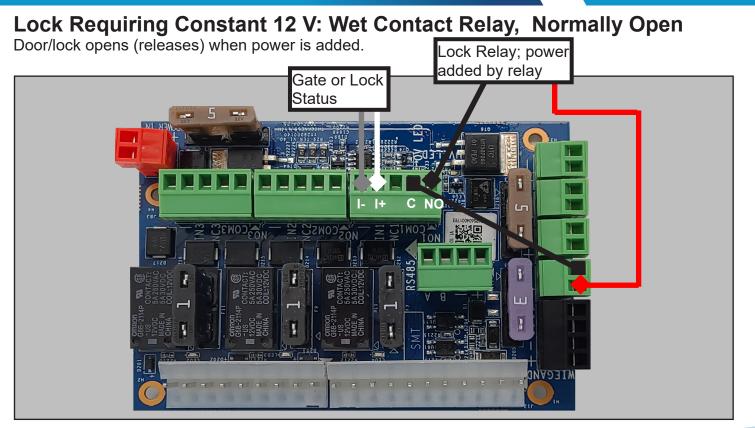

Lock Requiring Constant 12 V: Wet Contact Relay, Normally Closed


Door/lock opens (releases) when power is removed.

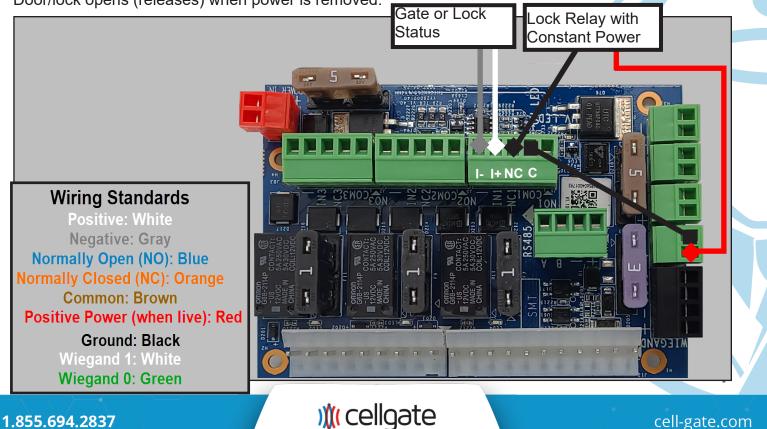





Wiegand Wiring to Board and Direct to Faceplate, 26 Bit Reader To Interface Board

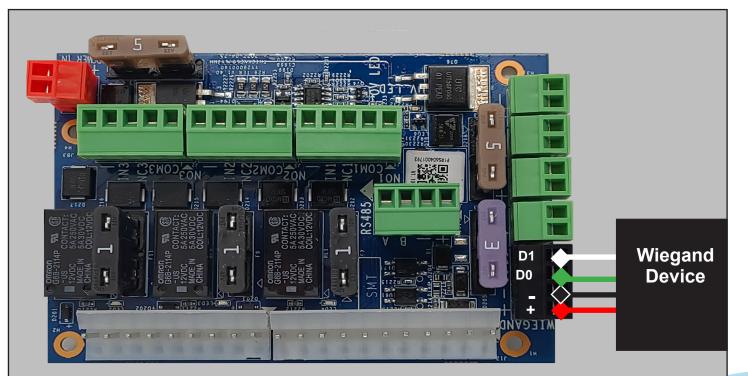

) (cellgate

cell-gate.com

8



Expansion Boards

Install One Expansion Board

The WXL allows the addition of an expansion board.

Expansion Board with 6" cable and mounting hardware Part#: CB-WIM 2000

Metal Mounting Plate (with 15-inch cable) Part #: CB-WIM 4000




Power off the device before you begin!

Installation

- 1. Use the key to open the WXL box. The Industrial Ethernet Switch is labeled.
- 2. Unscrew and remove the Ethernet switch. Set the screws aside so you can use them to reattach the plate.
- 3. Install the mounting plate using the screws from the Ethernet switch.


Expansion Board 1 has jumpers on R36, R35, and R34. Ensure that Board 1 is on the right.



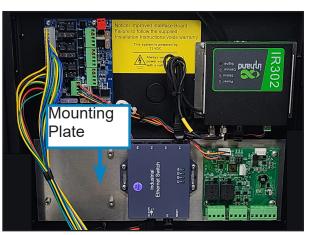





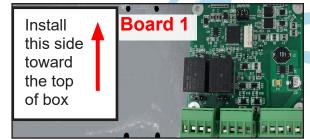

NOTE If you've ordered expansion boards, they may be already installed.



cell-gate.com

9



by)∦(cellgate

4. Reattach the Ethernet switch, port side-up, in the center of the expansion board using the screws from the shipment. 5. Connect the cables included in the shipment and the Ethernet switch. 6. Connect the expansion board to the RS485 and priedu original WXL circuit board, as shown below. Close the box and reattach it next to the gate. You are now ready to use your WXL. The RS485 is on the right. The internal Wiegand port is on the left. NOTE Do not plug the expansion board into the Wiegand. Internal Wiegand Port **RS485** Wiring Diagram: One Board **Main Power** Source **Original Circuit** Mode predu **Board** To = Watchman Device T **RS485 Expansion Board** Wiegand WXL Faceplate Device)((cellgate 1.855.694.2837 cell-gate.com




Add Another Expansion Board


- 1. Unscrew and remove the Ethernet switch. Set the screws aside so you can use them to reattach the switch.
- 2. Ensure that Board 1 is on the right and Board 2 is on the left. Expansion Board 1 has jumpers on R36, R35, and R34.


Expansion Board 2 has jumpers on R36 and R35 (see below).

⇒)**∦**(cellgate

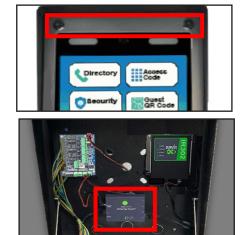

Board 2

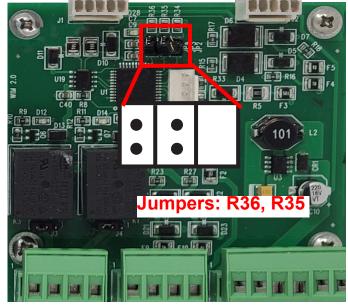

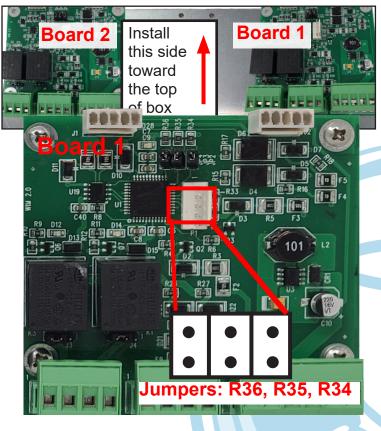

- 3. Reattach the Ethernet switch, port side-up, in the center of the expansion board.
- 4. Connect the board with the jumper cables.




) cellgate




5. Install Expansion Board 2 on the left side of the mounting plate. Check that you have jumpers on R34 and R35. Connect the expansion board to the RS485 and original WXL circuit board, as shown below. Close the box and remount it. You are now ready to


use your WXL.



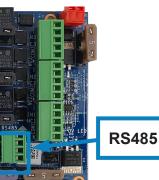

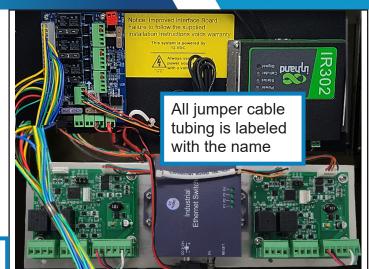

WXL Layout with Both Expansion Boards Connected

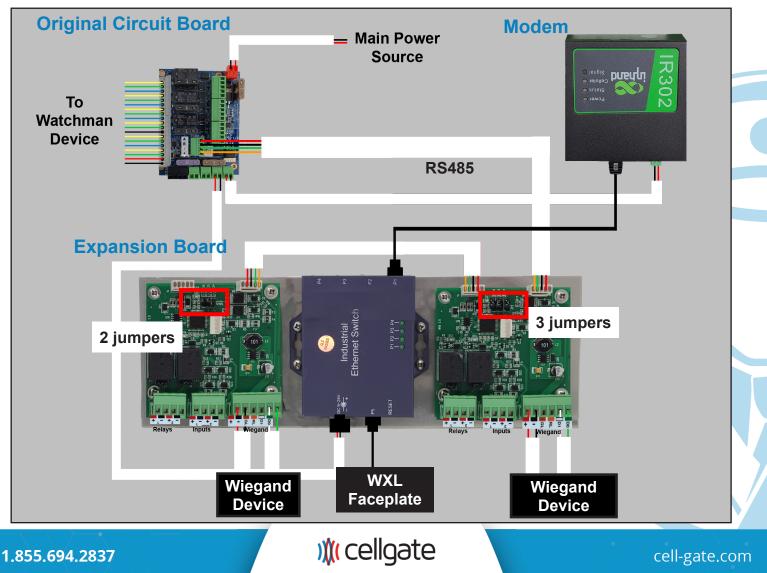


by)∦(cellgate





Magnetic Switch Setup

NOTE Gate statuses can be inverted. If needed, please call CellGate to invert.

The Mag Switch can be placed anywhere that allows A and B to be pulled at least 2 inches away from each other when the gate is open and within 1.5 inches when the gate is closed.

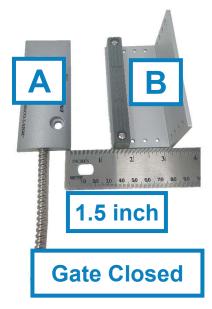

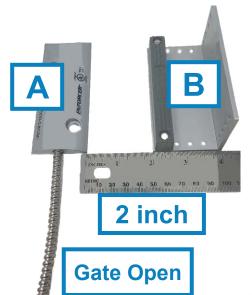


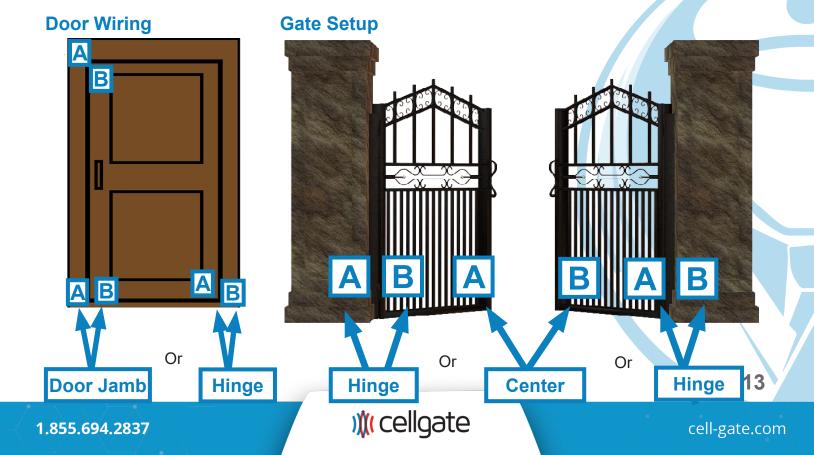



Optional External Camera Wiring

Do not make electrical connections to camera with the system energized. This will damage the camera and is not covered under the camera warranty.

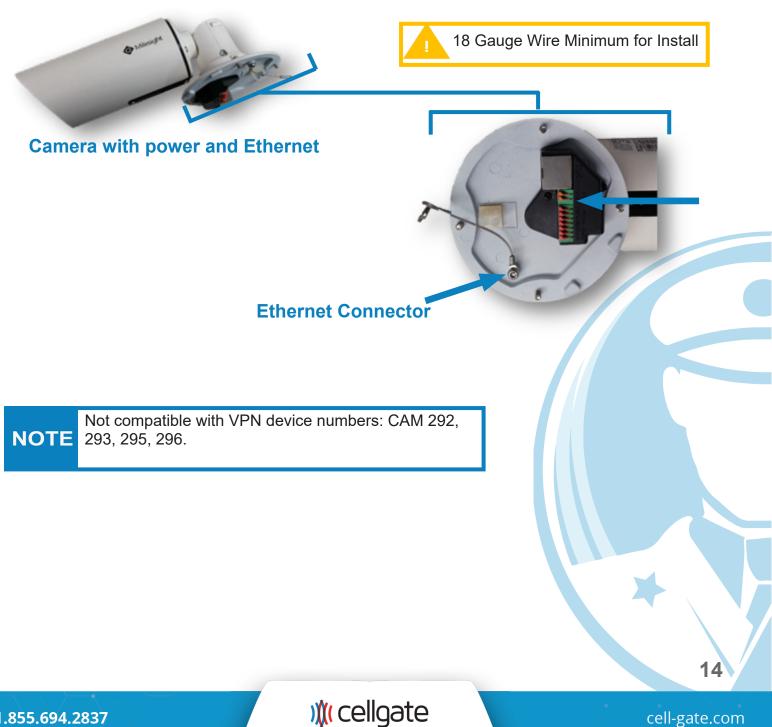


1.855.694.2837




Mounting Illustrations

Mounting to Architectural Post (Standard Pedestal Mount)

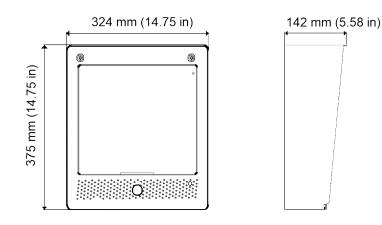


Part #: ENC-WFM1005

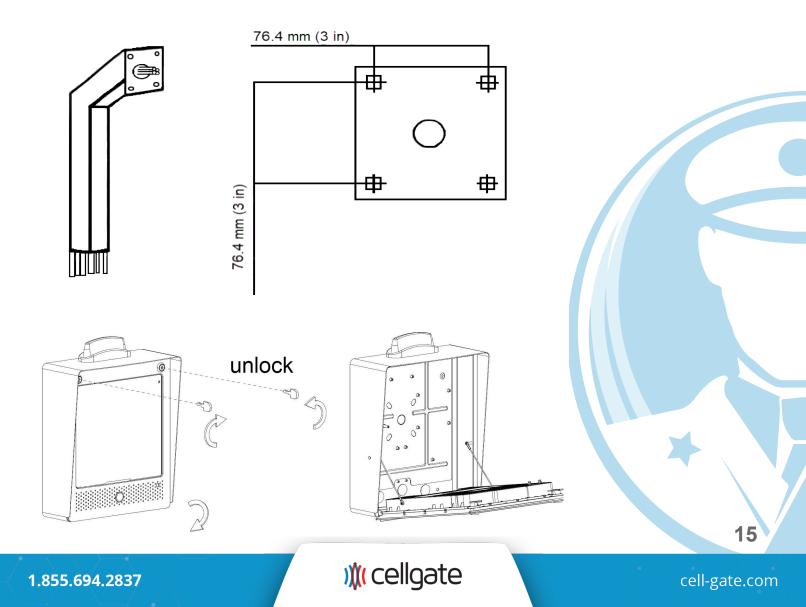





Mounting to Architectural Post (Standard Pedestal Mount) (Continued)

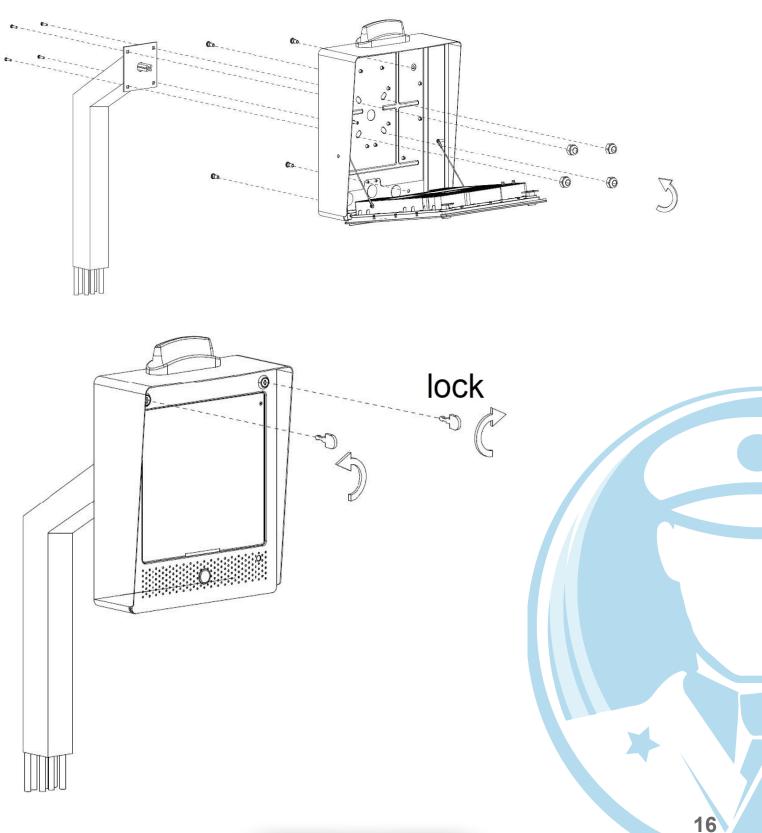




Mounting to Architectural Post (Type B)




Part #: ENC-WFM1006

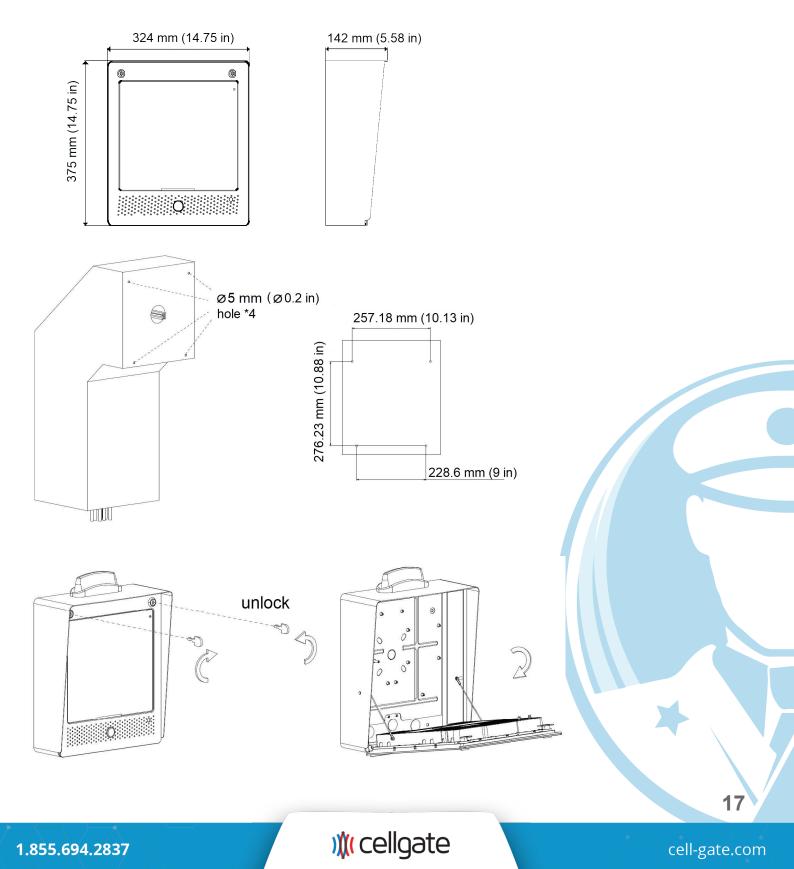



▶y)**)(** cellgate


Mounting to Architectural Post (Type B) (Continued)

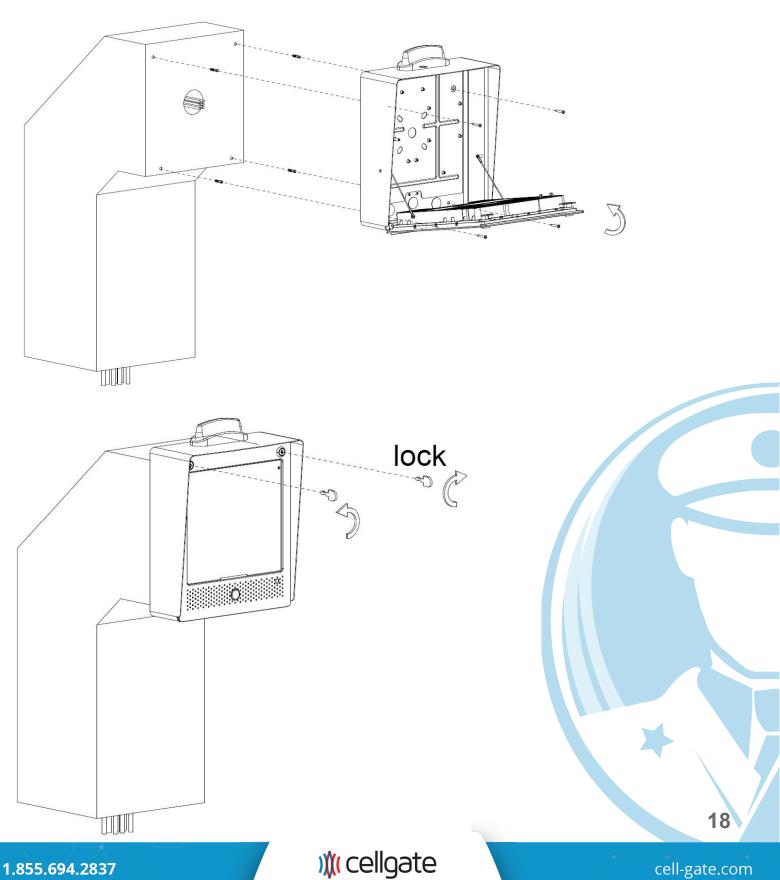






Mounting to Surface

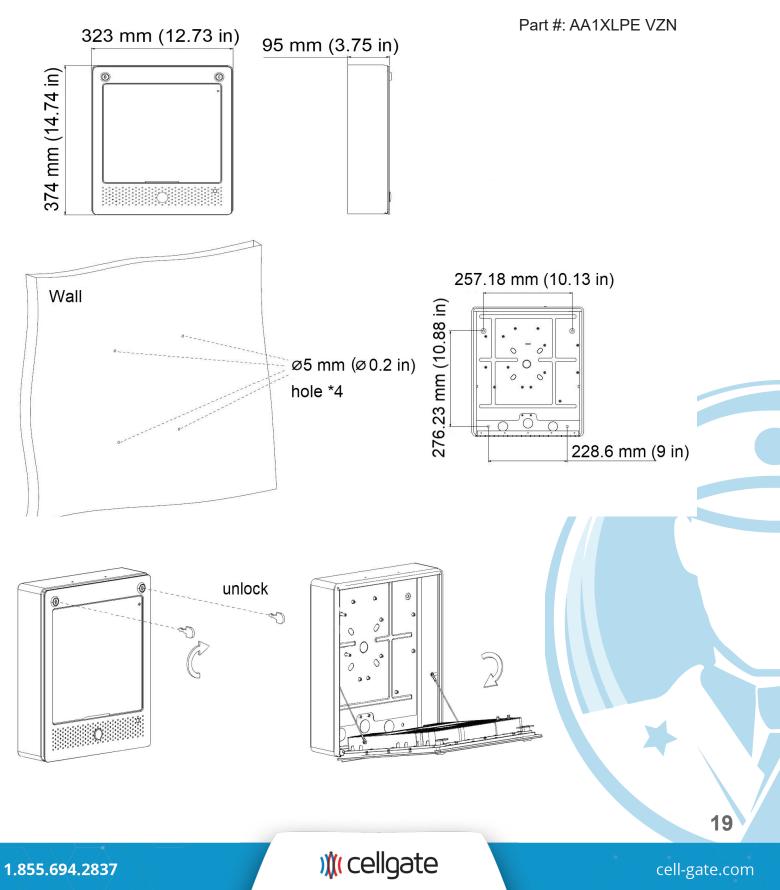



▶y)**)(** cellgate


Mounting to Surface (Continued)

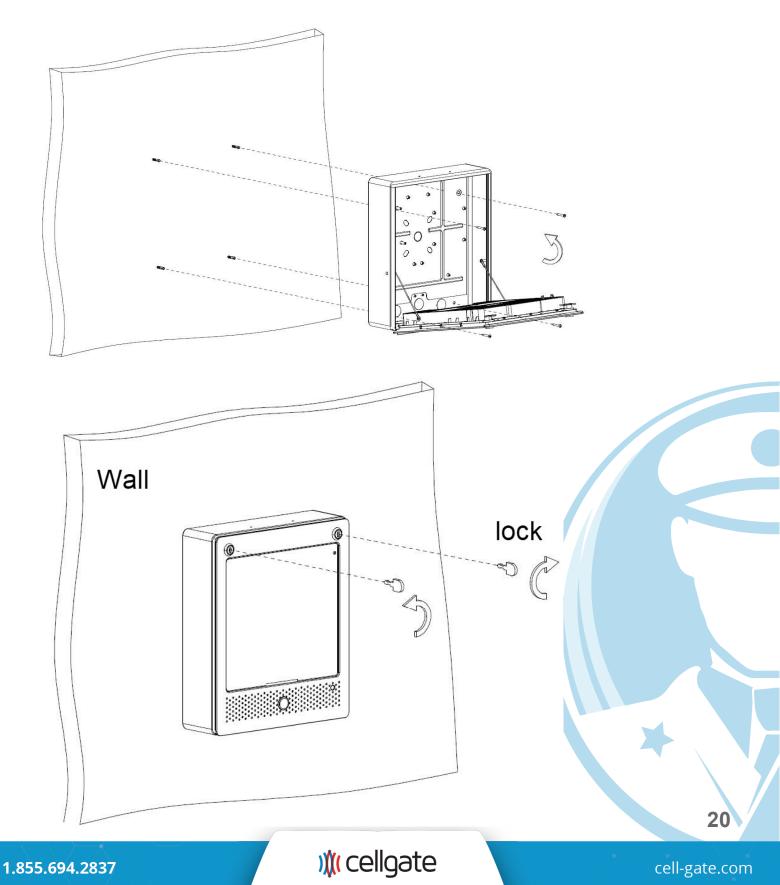



Flush Mounting

Watchman Part #: AA1XLPE, Unit Part #: AA1XLFM, AA1XLFM Flush Mount Kit Part #: ENC-WFM1003, ENC-WFM1004

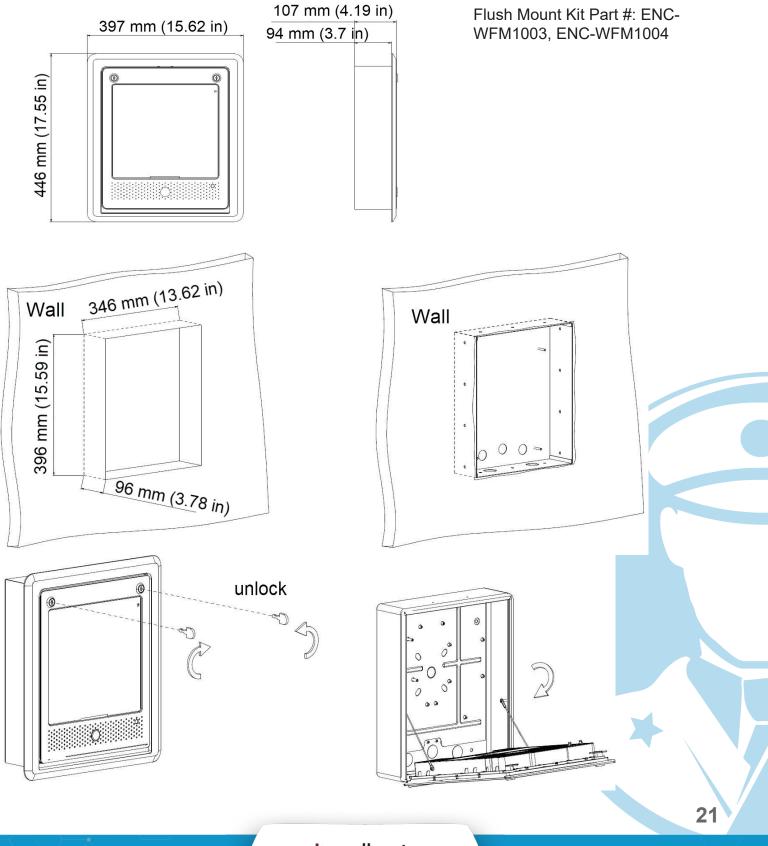



🗯 cellgate



▶y)**)(** cellgate

Flush Mounting (continued)

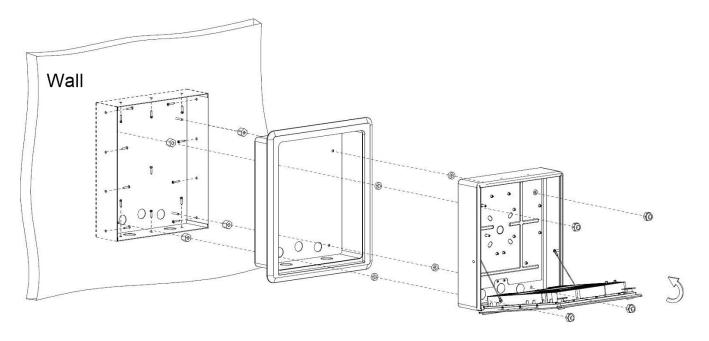

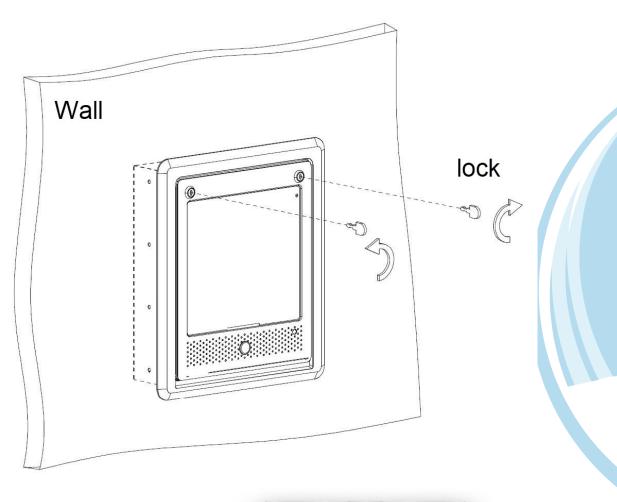

1.855.694.2837

cell-gate.com

22



Testing

 Enter the Testing Code, then tap the Enter. The Code activates Relay 1 (the gate should open).

 From the Home screen, tap **Directory** to open the directory, which lists all callgroups.

- 3. Tap a callgroup to initiate call. An automated message will play confirming the call was successful.
- 7
 8

 X
 0

 SBACK TO
 PRESS

 DIRECTORY
 DIRECTORY

 DIRECTORY
 ACCESS

 CODE
 CODE

 RECEPTIONIST

TYPE CODE THEN PRESS TO CALL

2

5

3

6

PRESS HERE TO SEARCH BY NAME

Ali, M

Bhakta

Bittick

Borhanian


DOWN

23



External Camera Installation

If you're installing an External Camera, call CellGate Technical Support for testing. Technical Support: (972) 231-1999, option 2.

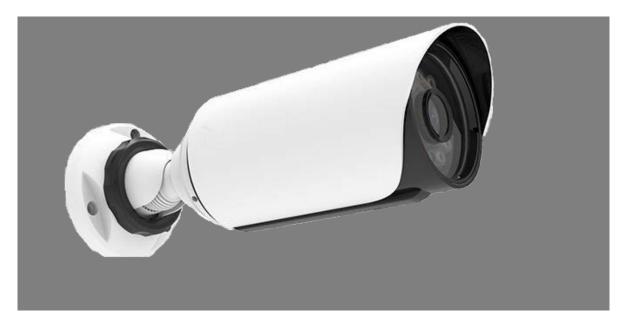

Customer Information

Leave the following items with the Customer:

- Customer Information Packet
- WXL Key
 - Installer keeps one key and gives one key to the customer

) cellgate